


767 SERIES

FLAMMABLE MATERIAL LOCATIONS

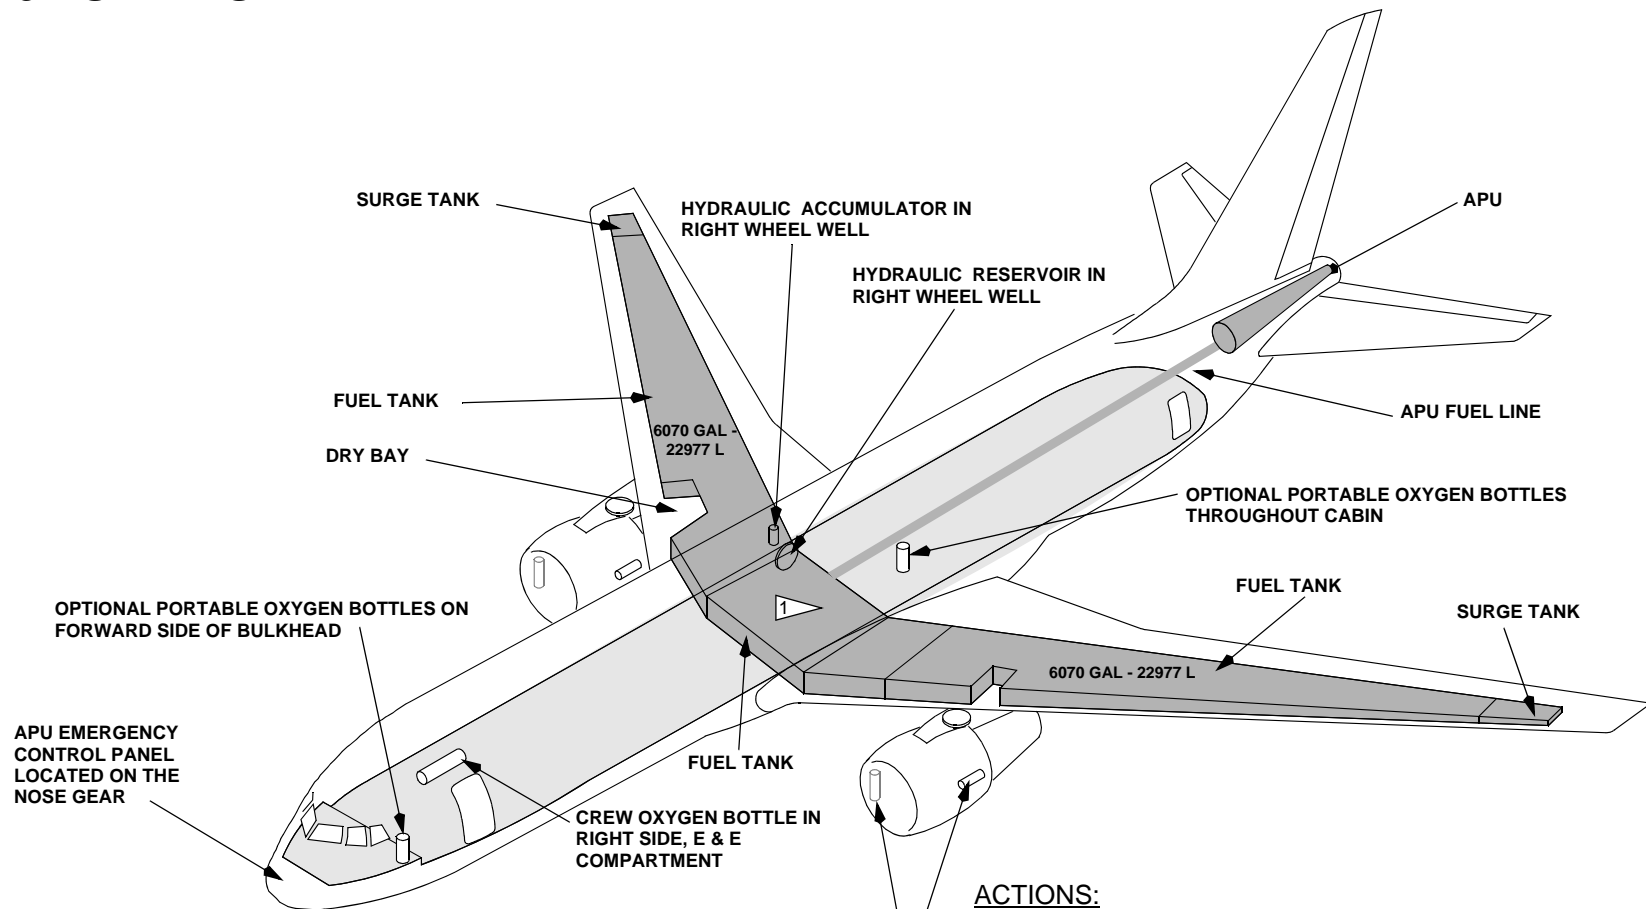

▶ CENTER FUEL TANK CAPACITIES		
MODEL	GALLONS	LITERS
STANDARD	4,560	17,261
-200 ER	8,310	31,457
-300 ER	12,000	45,425
-400 ER	12,000	45,425

ACTIONS:

WHEELS ARE EQUIPPED WITH FUSIBLE PLUGS DESIGNED TO MELT AND DEFLATE THE TIRE WHEN THE TEMPERATURE IS EXCESSIVE.

HOT BRAKES

Normal Cooling (move aircraft to suitable location and allow to cool on their own).

Water Mist: (can be deployed from turret or handline).

Fans (placement of fans may place firefighters very close to the hazard zone).

WHEEL FIRE

Large amounts of water initially with turrets.

Transition to handline application to continue and maintain a cooling effect.


WARNING: APPROACH LANDING GEAR TRUCK FROM FORWARD OR AFT WHEN FIGHTING

A WHEELFIRE, AS WHEELS AND TIRES MAY EXPLODE.

ENGINE OIL TANK - FORWARD RIGHT OR REAR LEFT SIDE OF EACH ENGINE

767 SERIES


1 ENTRY/SERVICE DOOR EXTERNAL HANDLE

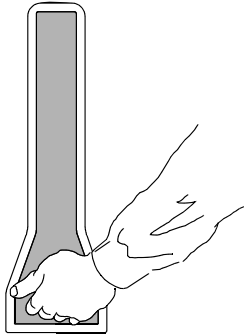

TO OPEN DOOR:

1. PUSH IN DISARM LEVER (RED SURFACE LABELED "PUSH").
2. PULL AND LIFT OPERATING HANDLE TO UNLATCH DOOR.
3. MOVE DOOR UPWARD.

2 OVERWING ESCAPE HATCHES

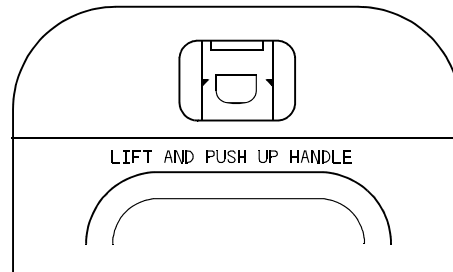


TO OPEN HATCH:

1. LIFT LOWER PORTION OF HANDLE AWAY FROM THE SIDE OF THE AIRPLANE.
2. PUSH INWARD AND UP ON THE HANDLE.
3. PUSH HATCH INWARD.

EMERGENCY RESCUE ACCESS-1

3 TYPE 1 EMERGENCY EXIT DOOR

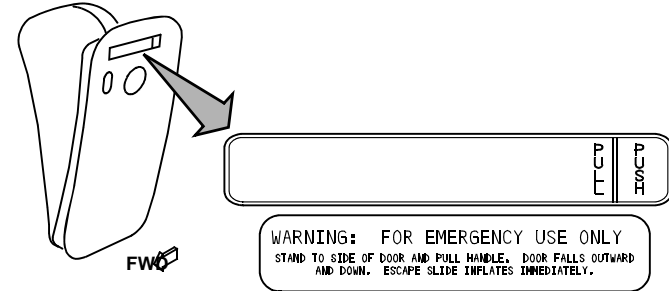

TO OPEN DOOR:

1. PUSH ON "PUSH" PANEL TO GAIN ACCESS TO HANDLE.
2. PULL HANDLE FORWARD AND OUTWARD.
3. DOOR OPENS OUTWARD AND DOWN.

WARNING: STAND TO THE SIDE OF DOOR WHEN PULLING HANDLE. ESCAPE SLIDE DOES NOT DISARM AND WILL DEPLOY IMMEDIATELY WHEN A TYPE 1 DOOR IS OPENED FROM THE OUTSIDE.

4 CHOP OUT AREAS


NOTE: "CHOP OUT" AREAS REQUIRE METAL CUTTING PORTABLE POWER EQUIPMENT. BECAUSE OF TYPE OF STRUCTURE AND POSSIBLE INJURY TO PERSONNEL WITHIN, IT IS RECOMMENDED THAT MAJOR EFFORT TO GAIN ACCESS BE DIRECTED TO HATCHES AND DOORS. URGENCY OF SITUATION WILL DICTATE NECESSITY FOR "CHOP OUT."

NOTES:

1. FOR ENTRY/SERVICE DOORS AND OVERWING HATCHES, ESCAPE SLIDE DISARMS AUTOMATICALLY WHEN DOOR OR HATCH IS OPENED FROM THE OUTSIDE.
2. ON PASSENGER AIRPLANES, COCKPIT WINDOWS CANNOT BE OPENED FROM THE OUTSIDE.
3. ON 767 FREIGHTERS, THE RIGHT SIDE COCKPIT WINDOW CAN BE OPENED FROM THE OUTSIDE.


767 SERIES

EMERGENCY RESCUE ACCESS-2

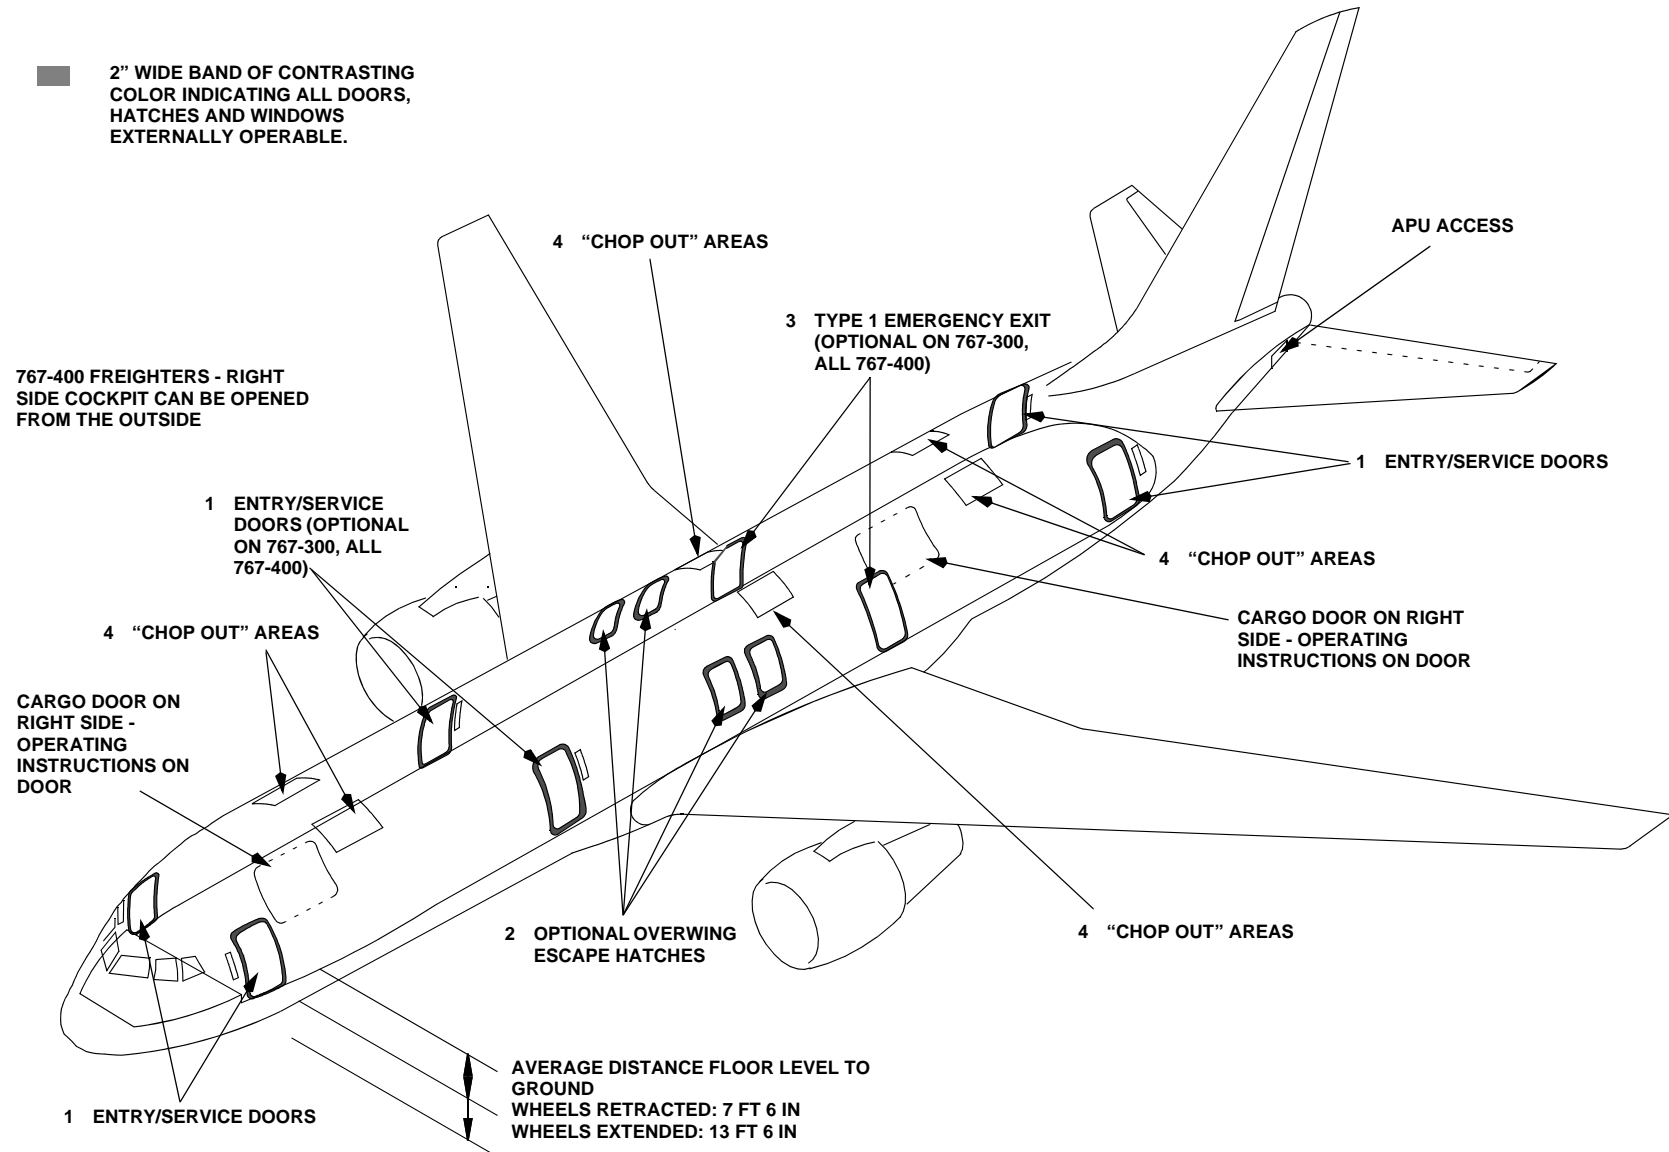


767 SERIES

BATTERY LOCATIONS

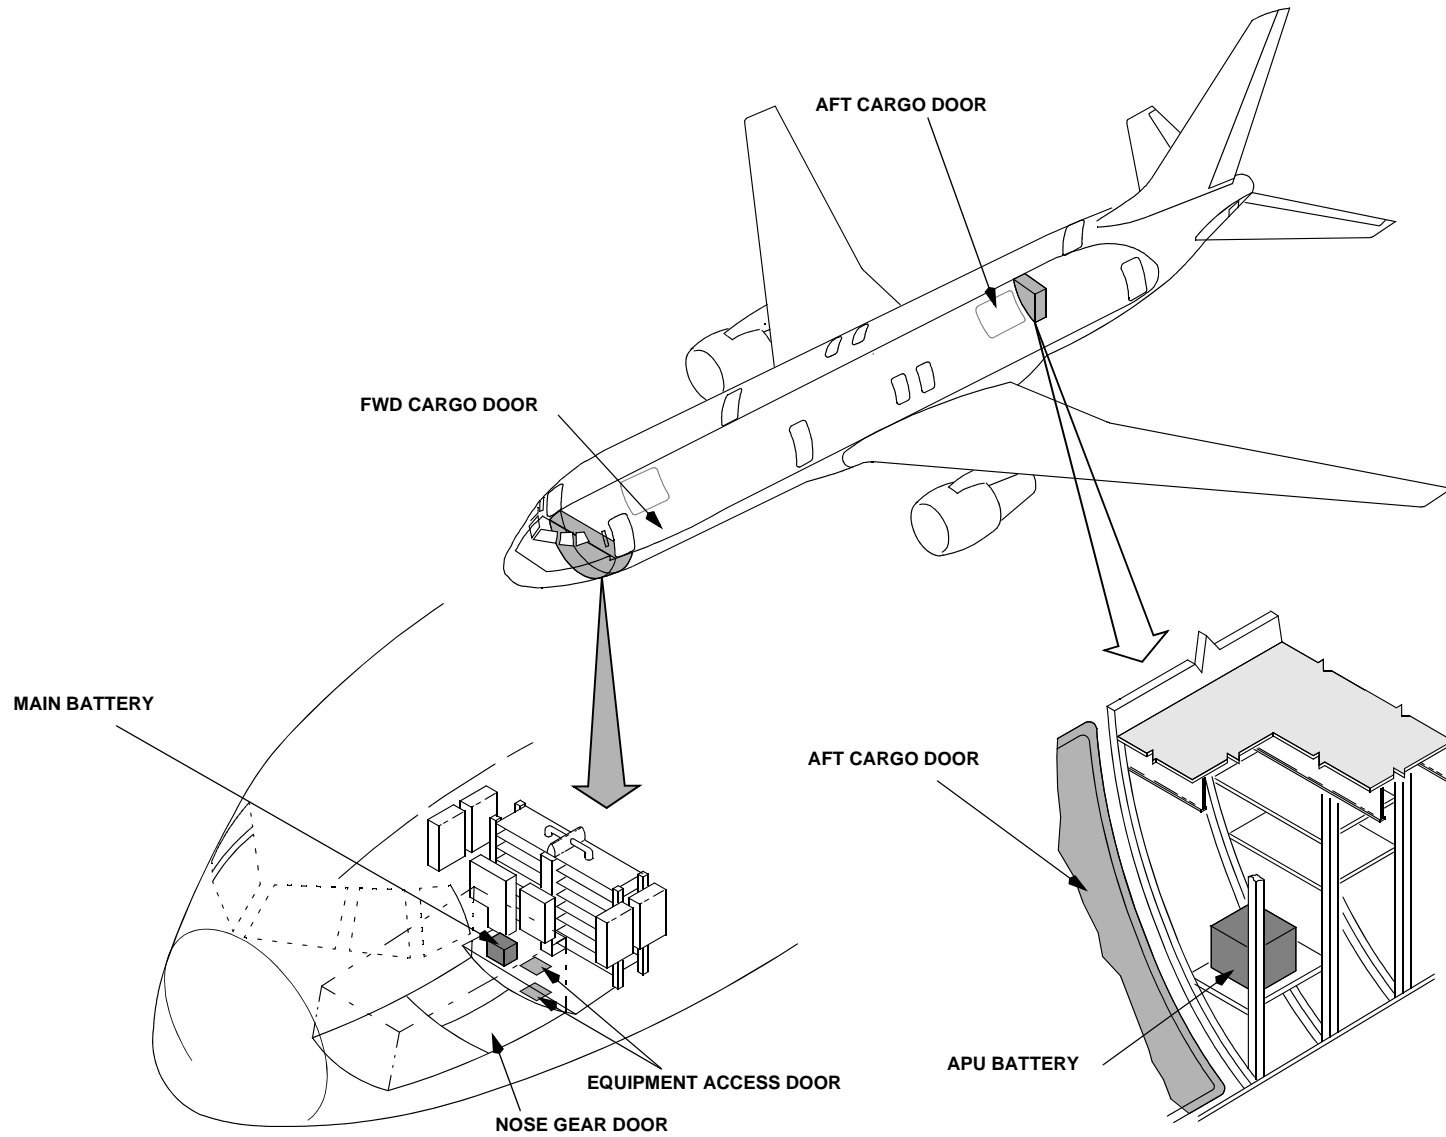

767 SERIES

FLIGHT DECK CONTROL SWITCH LOCATIONS

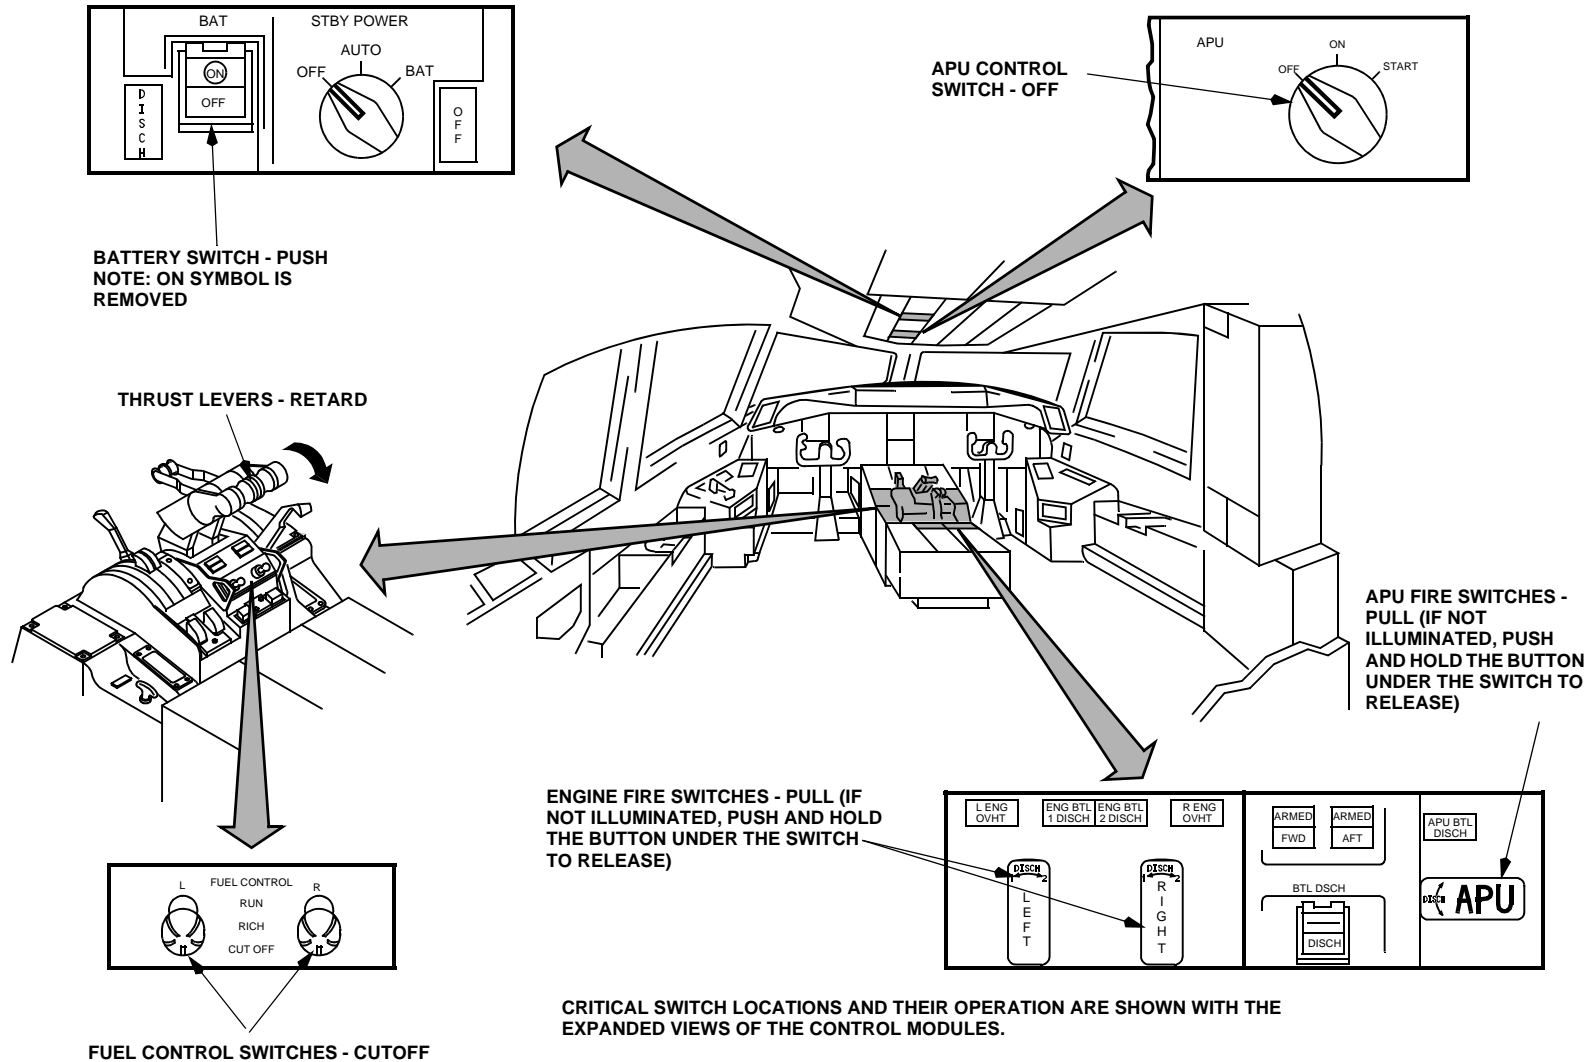

767 SERIES

COMPOSITE MATERIALS LOCATIONS

