


787 SERIES


FLAMMABLE MATERIAL LOCATIONS

CAUTION: Rescue crews wearing full PPE to include SCBA's must use caution when moving across sections of aircraft that have been exposed to fatigue or fire as the result of an accident. Crews need to verify the integrity of the surface area before moving their weight and equipment across it. Signs could include but are not limited to deformity of structure, visual signs of flame impingement or uneven surfaces. Surface integrity can be checked with a pike pole, axe or any instrument used to sound surfaces for integrity.

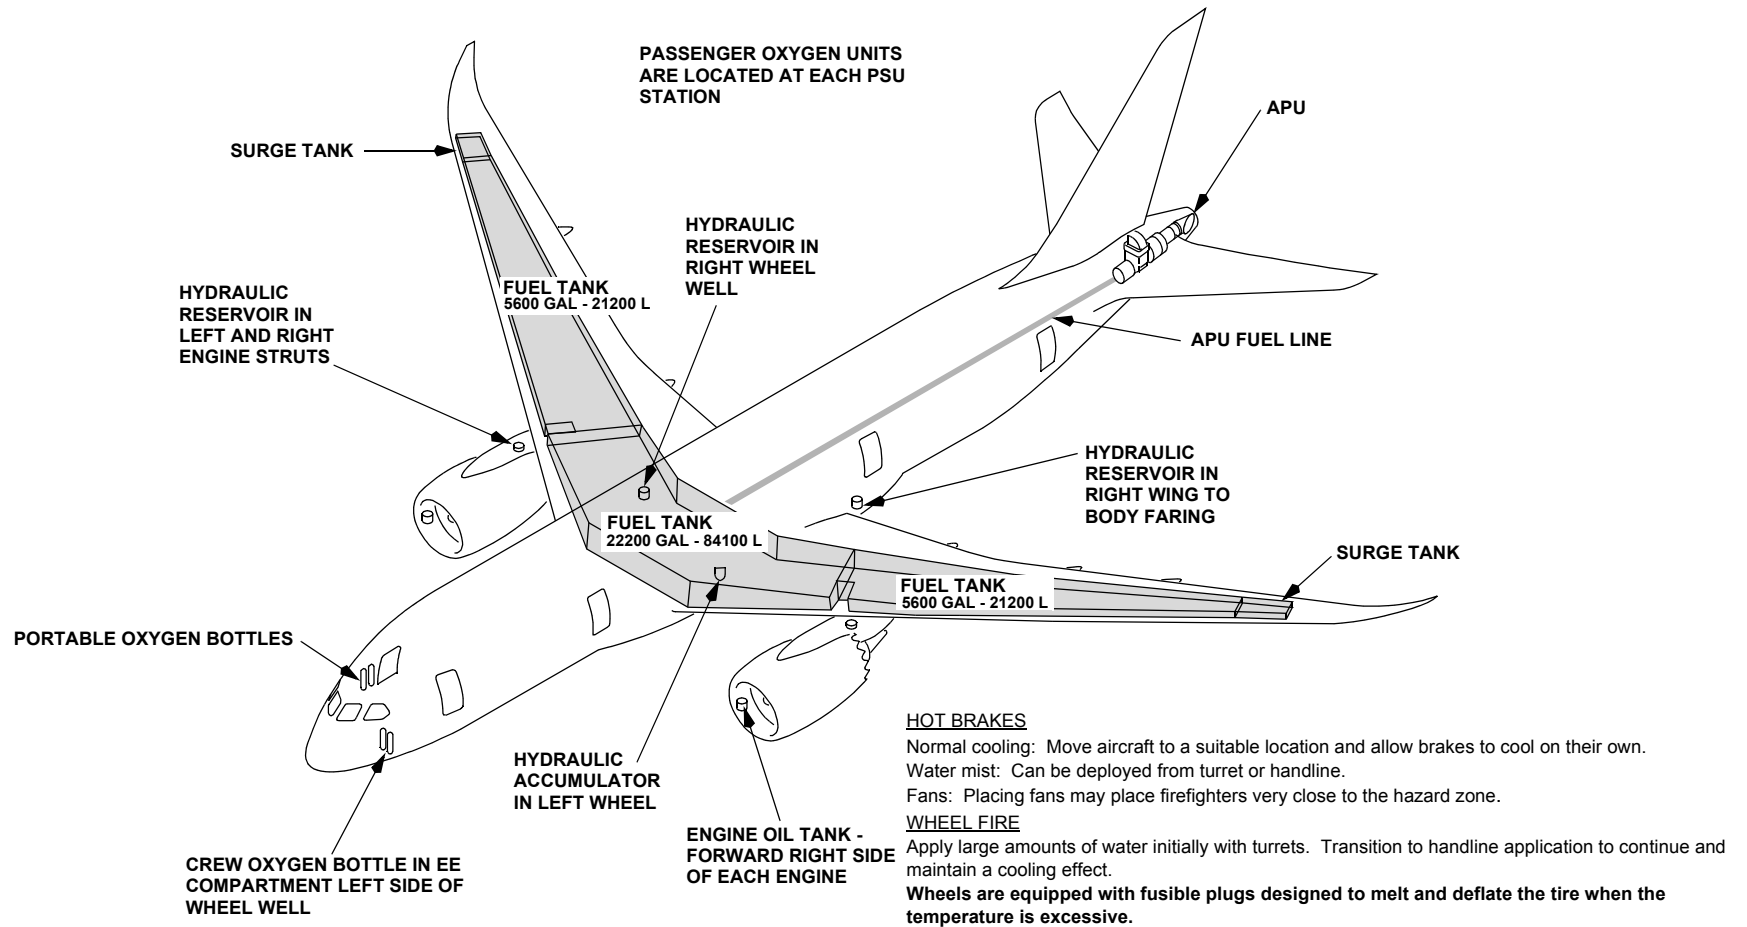

787 SERIES


1 ENTRY/SERVICE DOOR EXTERNAL HANDLE

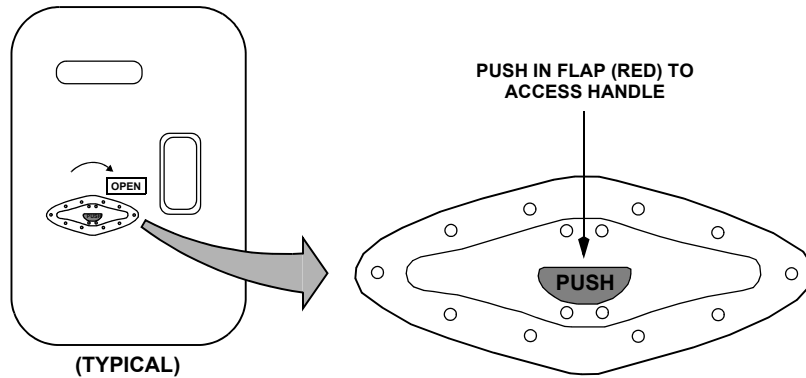

TO OPEN DOOR:

1. PUSH IN RED FLAP.
2. PULL HANDLE FROM RECESS.
3. ROTATE HANDLE 180 DEGREES IN THE DIRECTION OF THE "OPEN" ARROW.
4. PULL DOOR OUTWARD.

2 CREW OVERHEAD ESCAPE HATCH EXTERNAL HANDLE

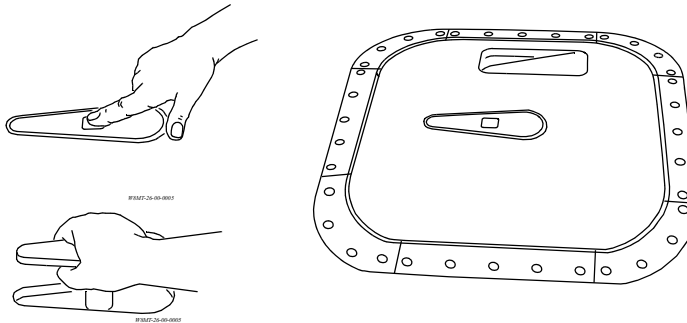

TO OPEN HATCH:

1. PUSH RELEASE TRIGGER ON HANDLE (HANDLE WILL SPRING OUT FROM RECESS APPROXIMATELY 3 INCHES).
2. ROTATE HANDLE 180°.
3. PUSH HATCH INWARD.


EMERGENCY RESCUE ACCESS-1

3 CUT-IN AREAS

NOTE: CUT-IN AREAS REQUIRE METAL CUTTING PORTABLE POWER EQUIPMENT. BECAUSE OF TYPE OF STRUCTURE AND POSSIBLE INJURY TO PERSONNEL WITHIN, IT IS RECOMMENDED THAT MAJOR EFFORT TO GAIN ACCESS BE DIRECTED TO HATCHES AND DOORS. URGENCY OF SITUATION WILL DICTATE THE NECESSITY FOR A CUT-IN.


787 SERIES

EMERGENCY RESCUE ACCESS-2

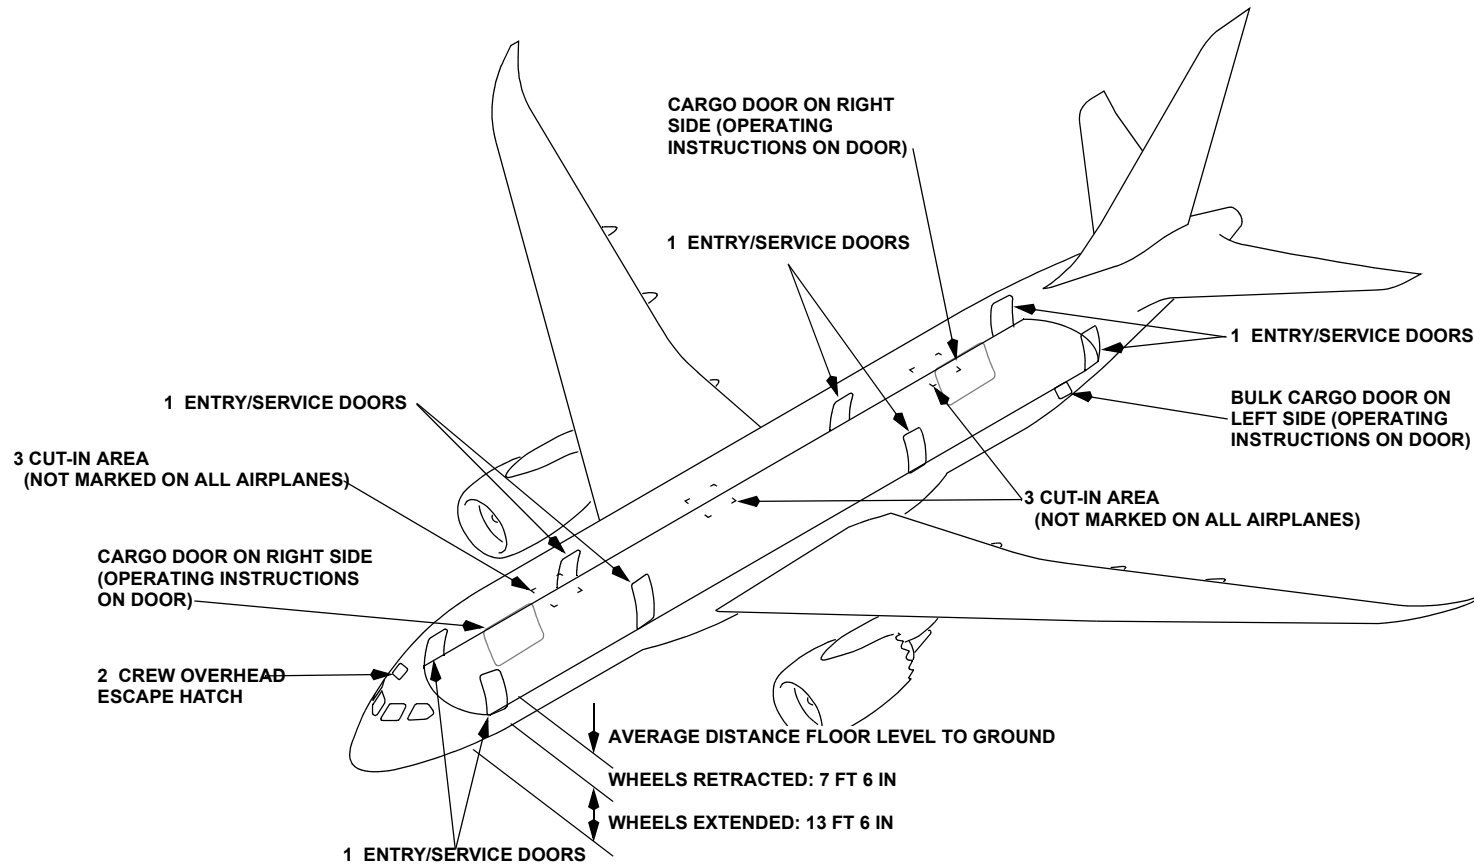


787 SERIES

EMERGENCY RESCUE ACCESS-3

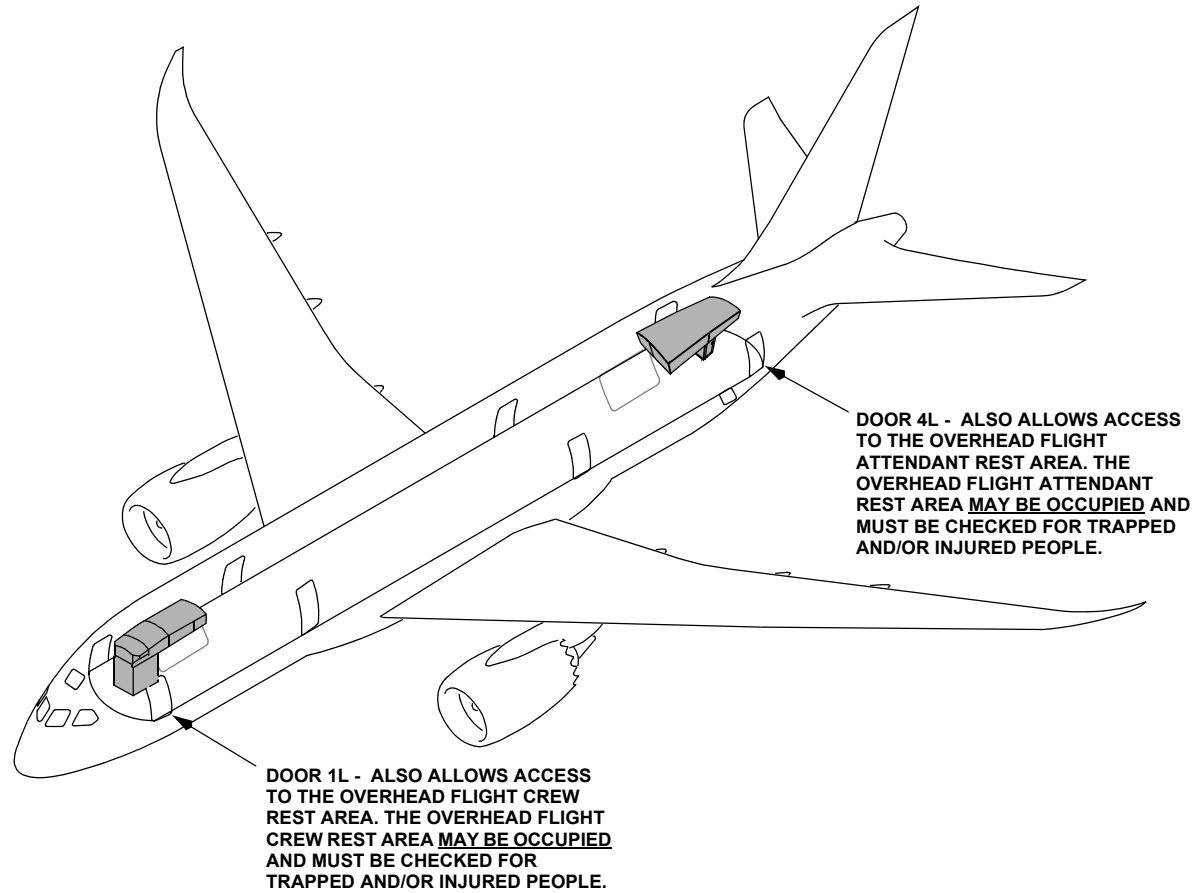


787 SERIES

EMERGENCY RESCUE ACCESS-4

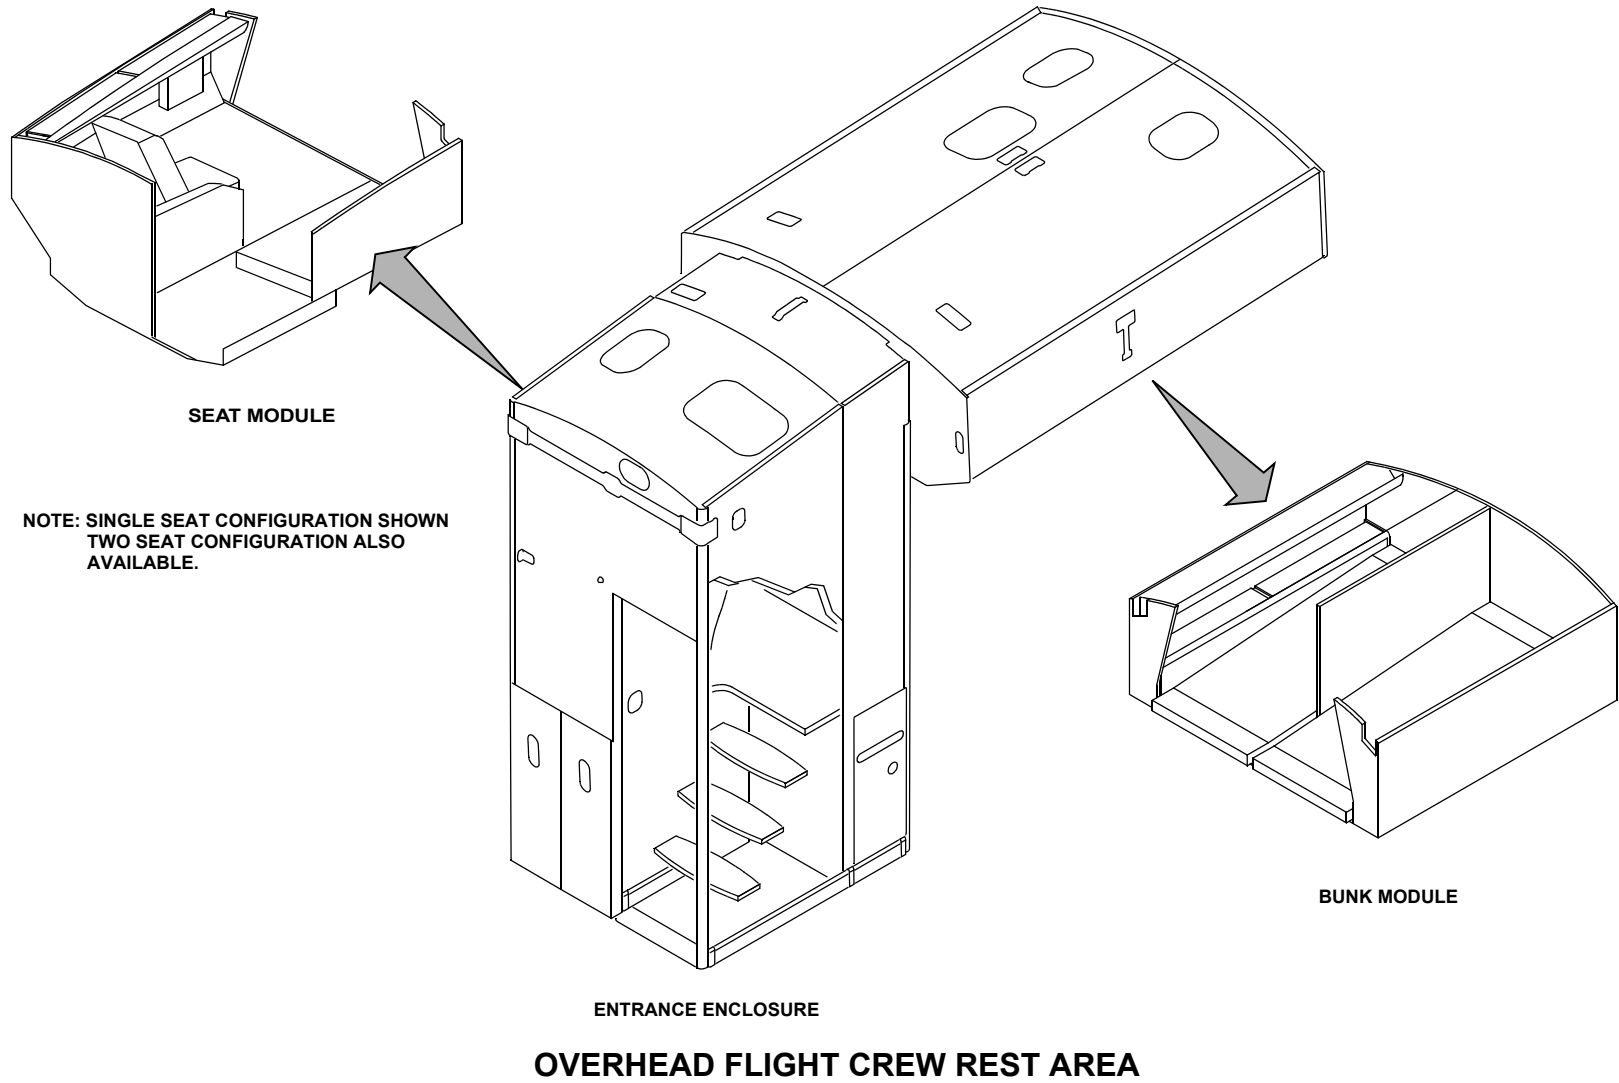

787 SERIES


EMERGENCY RESCUE ACCESS-5

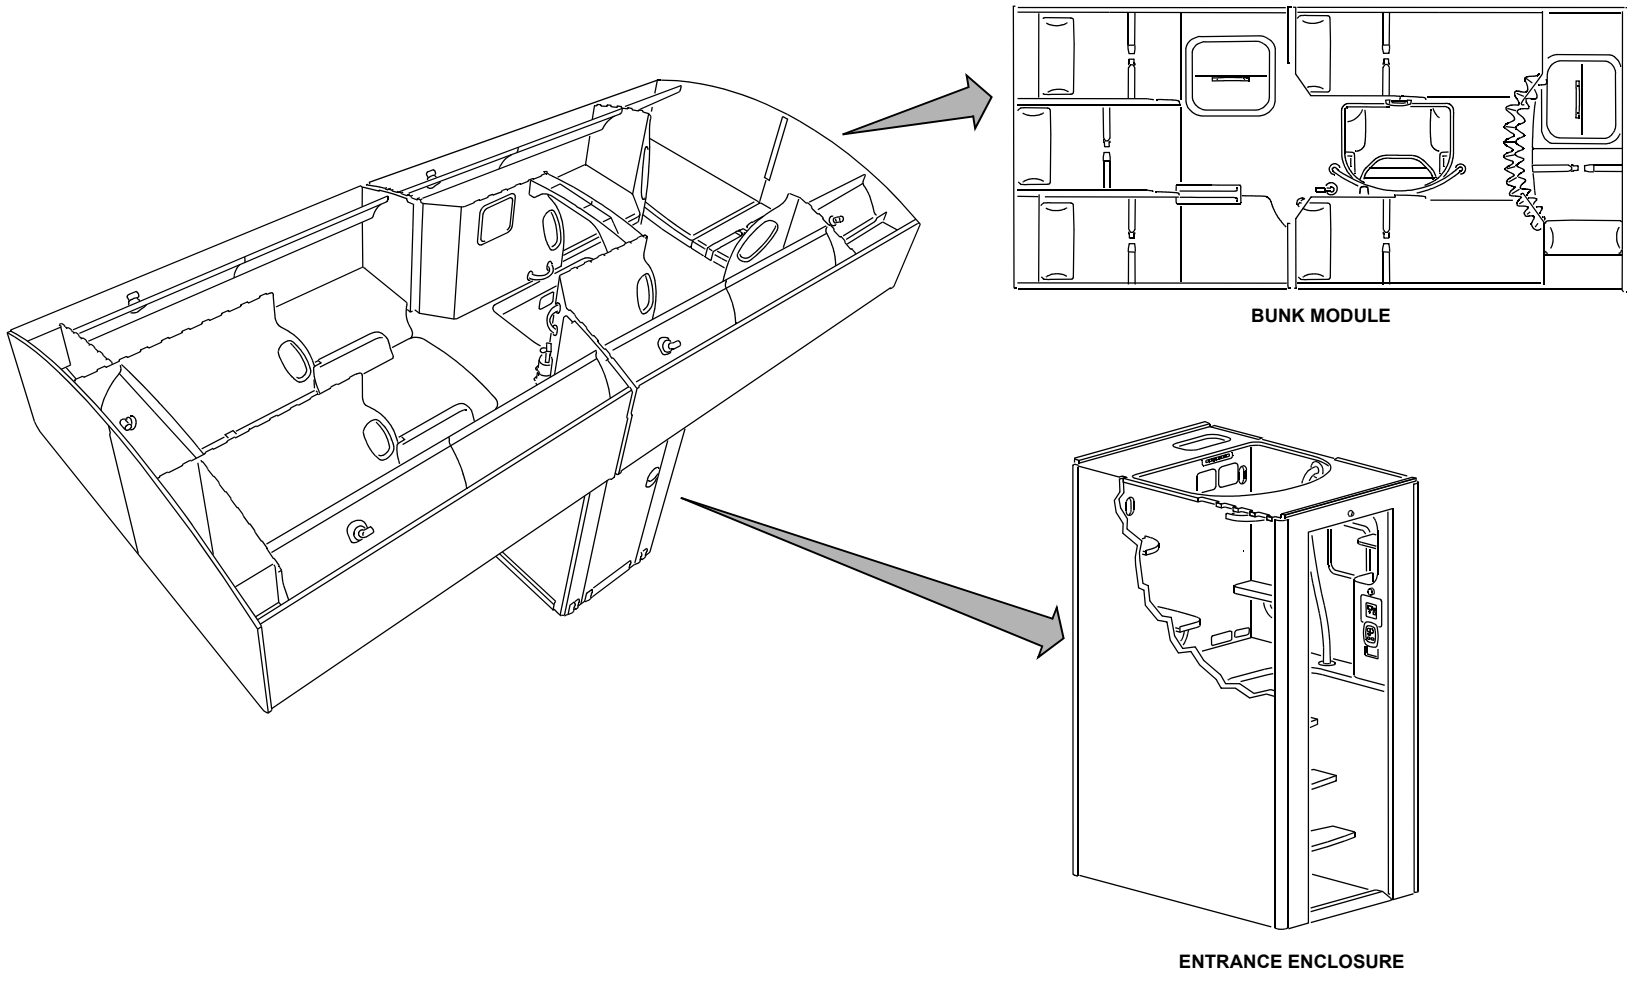

OVERHEAD FLIGHT ATTENDANT REST AREA


787 SERIES

BATTERY LOCATIONS


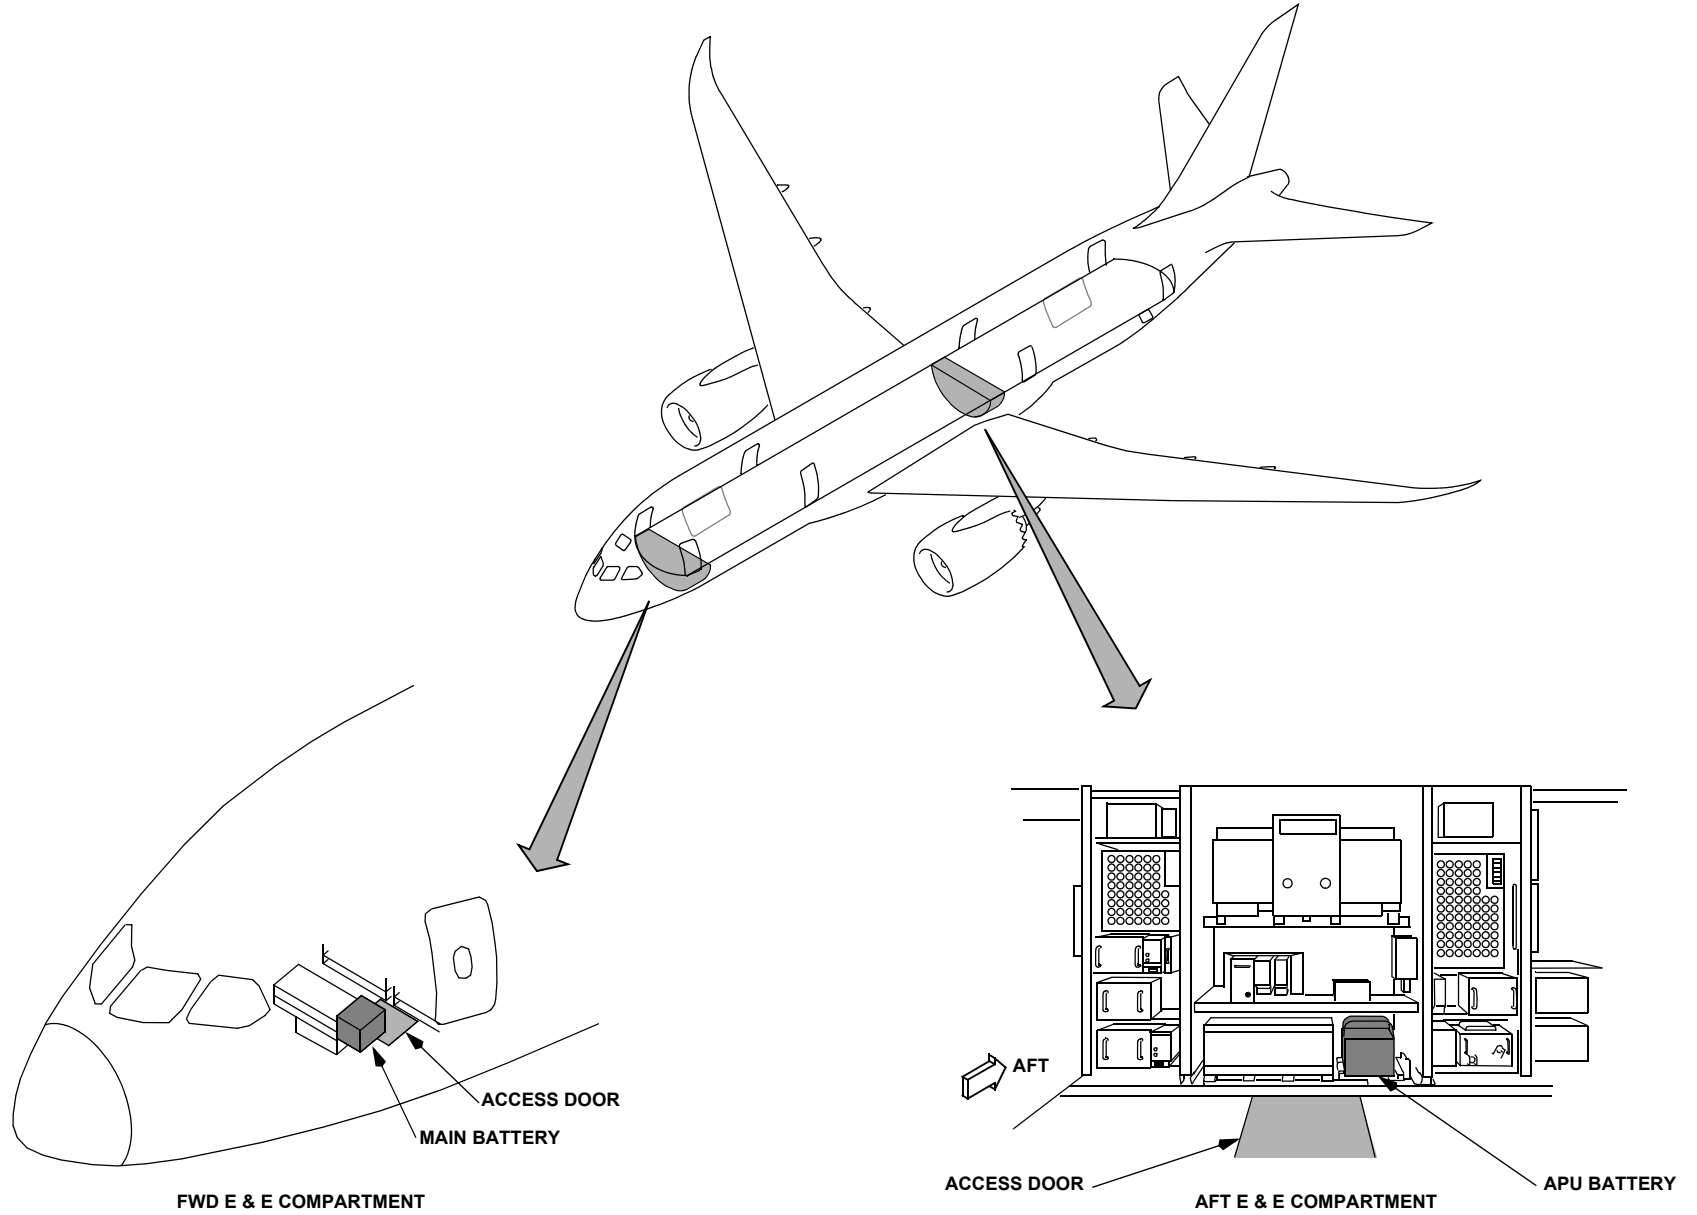


787 SERIES

FLIGHT DECK CONTROL SWITCH LOCATIONS


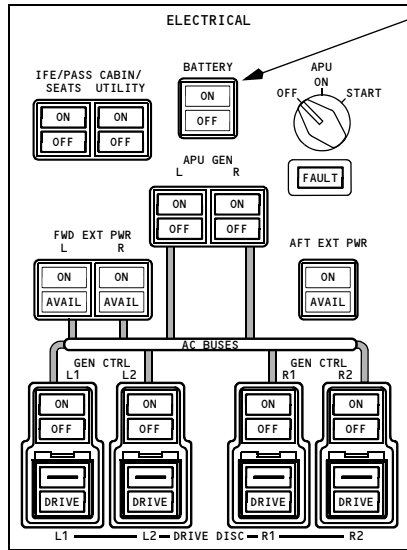


BATTERY SWITCH - PRESS
NOTE: ON SYMBOL IS REMOVED

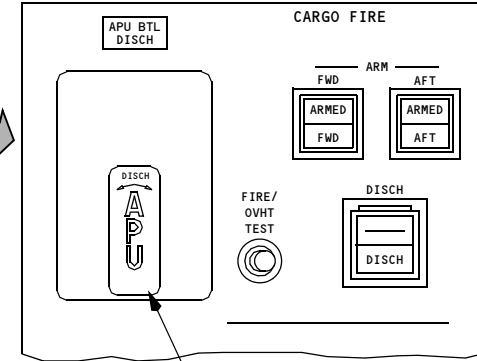
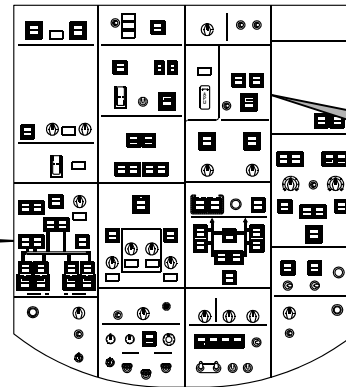


APU FIRE SWITCH - PULL (IF NOT ILLUMINATED, PUSH AND HOLD THE BUTTON UNDER THE SWITCH TO RELEASE)

THRUST LEVERS - RETARD

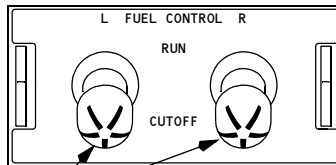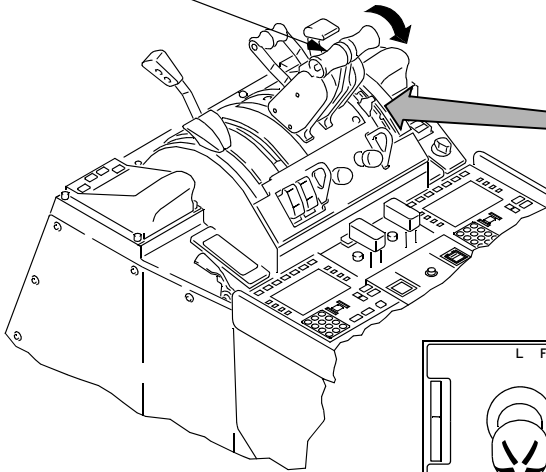

FUEL CONTROL SWITCHES - CUTOFF

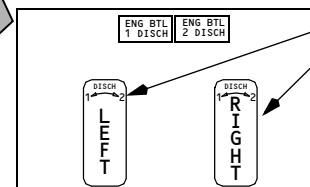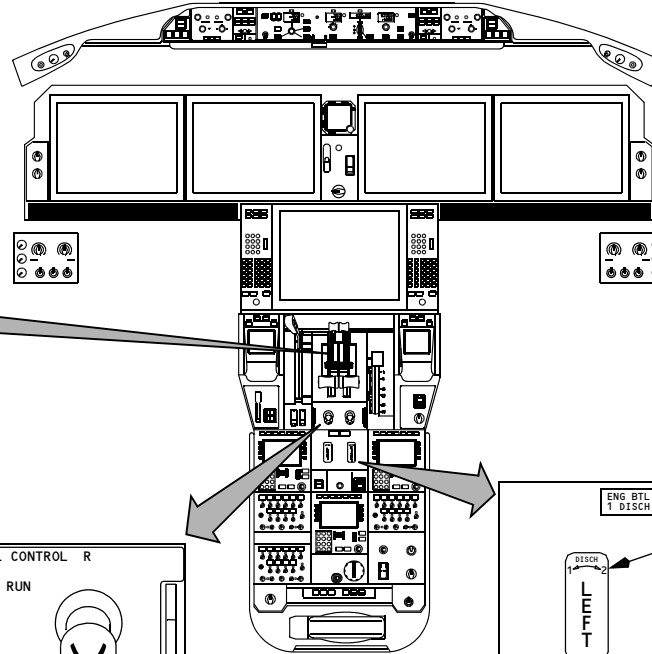


ENGINE FIRE SWITCHES - PULL (IF NOT ILLUMINATED, PUSH AND HOLD THE BUTTON UNDER THE SWITCH TO RELEASE)

CRITICAL SWITCH LOCATIONS AND THEIR OPERATION ARE SHOWN WITH THE EXPANDED VIEWS OF THE CONTROL MODULES.

787 SERIES

COMPOSITE MATERIALS LOCATIONS

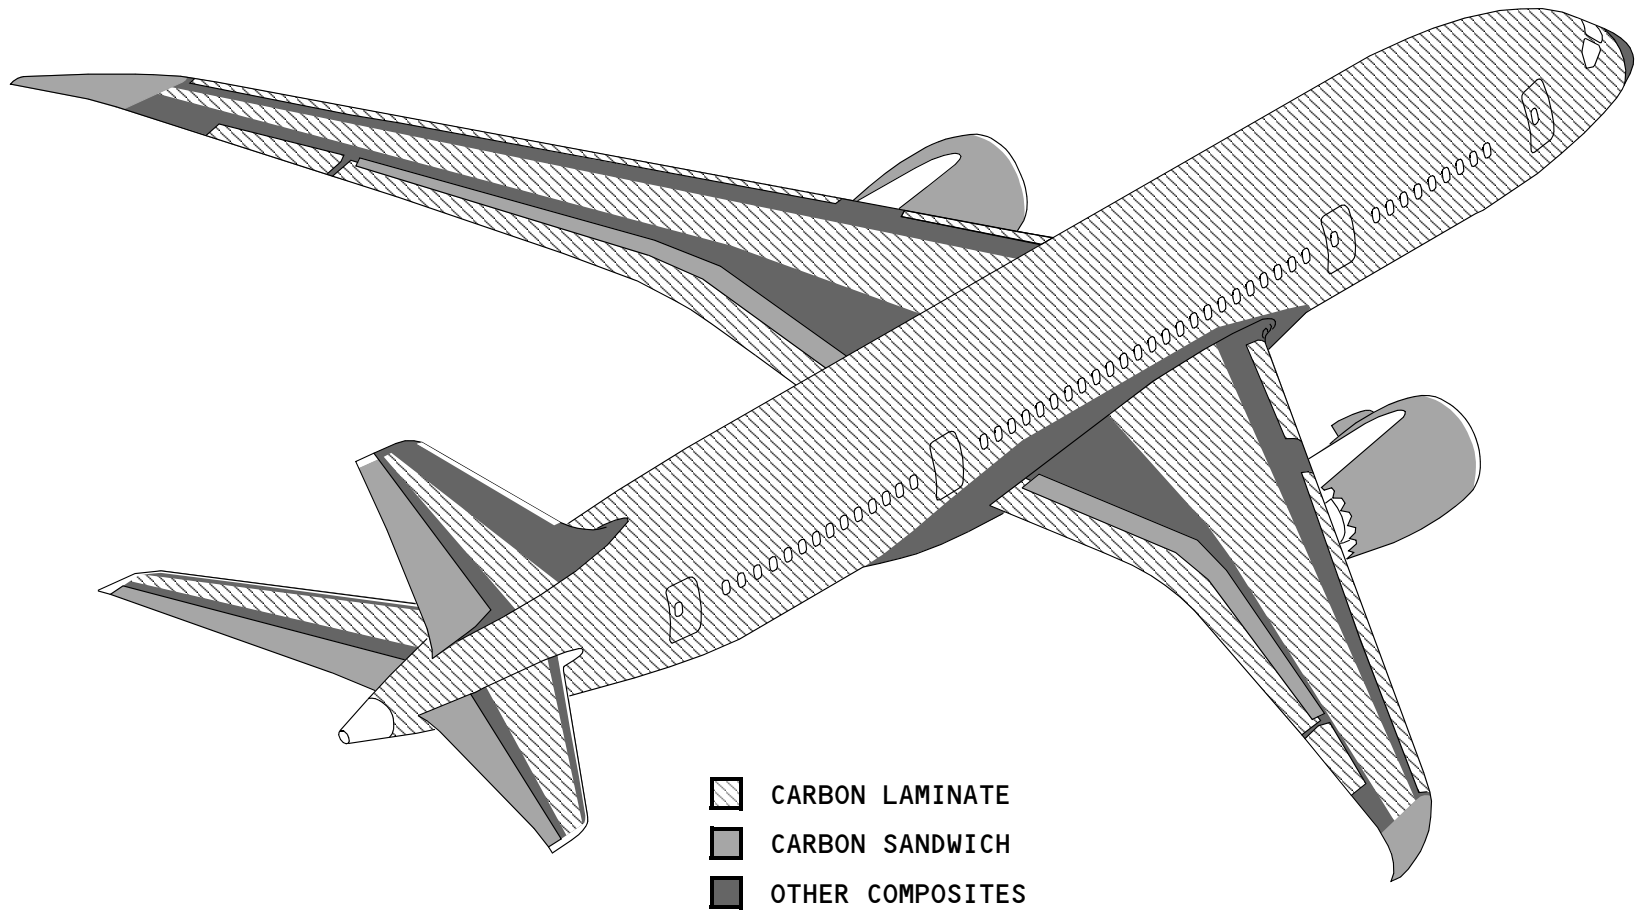

787 SERIES

Intentionally Blank