


767 -2C Freighter

FLAMMABLE MATERIAL LOCATIONS

CAUTION: Rescue crews wearing full PPE to include SCBA's must use caution when moving across sections of aircraft that have been exposed to fatigue or fire as the result of an accident. Crews need to verify the integrity of the surface area before moving their weight and equipment across it. Signs could include but are not limited to deformity of structure, visual signs of flame impingement or uneven surfaces. Surface integrity can be checked with a pike pole, axe or any instrument used to sound surfaces for integrity.

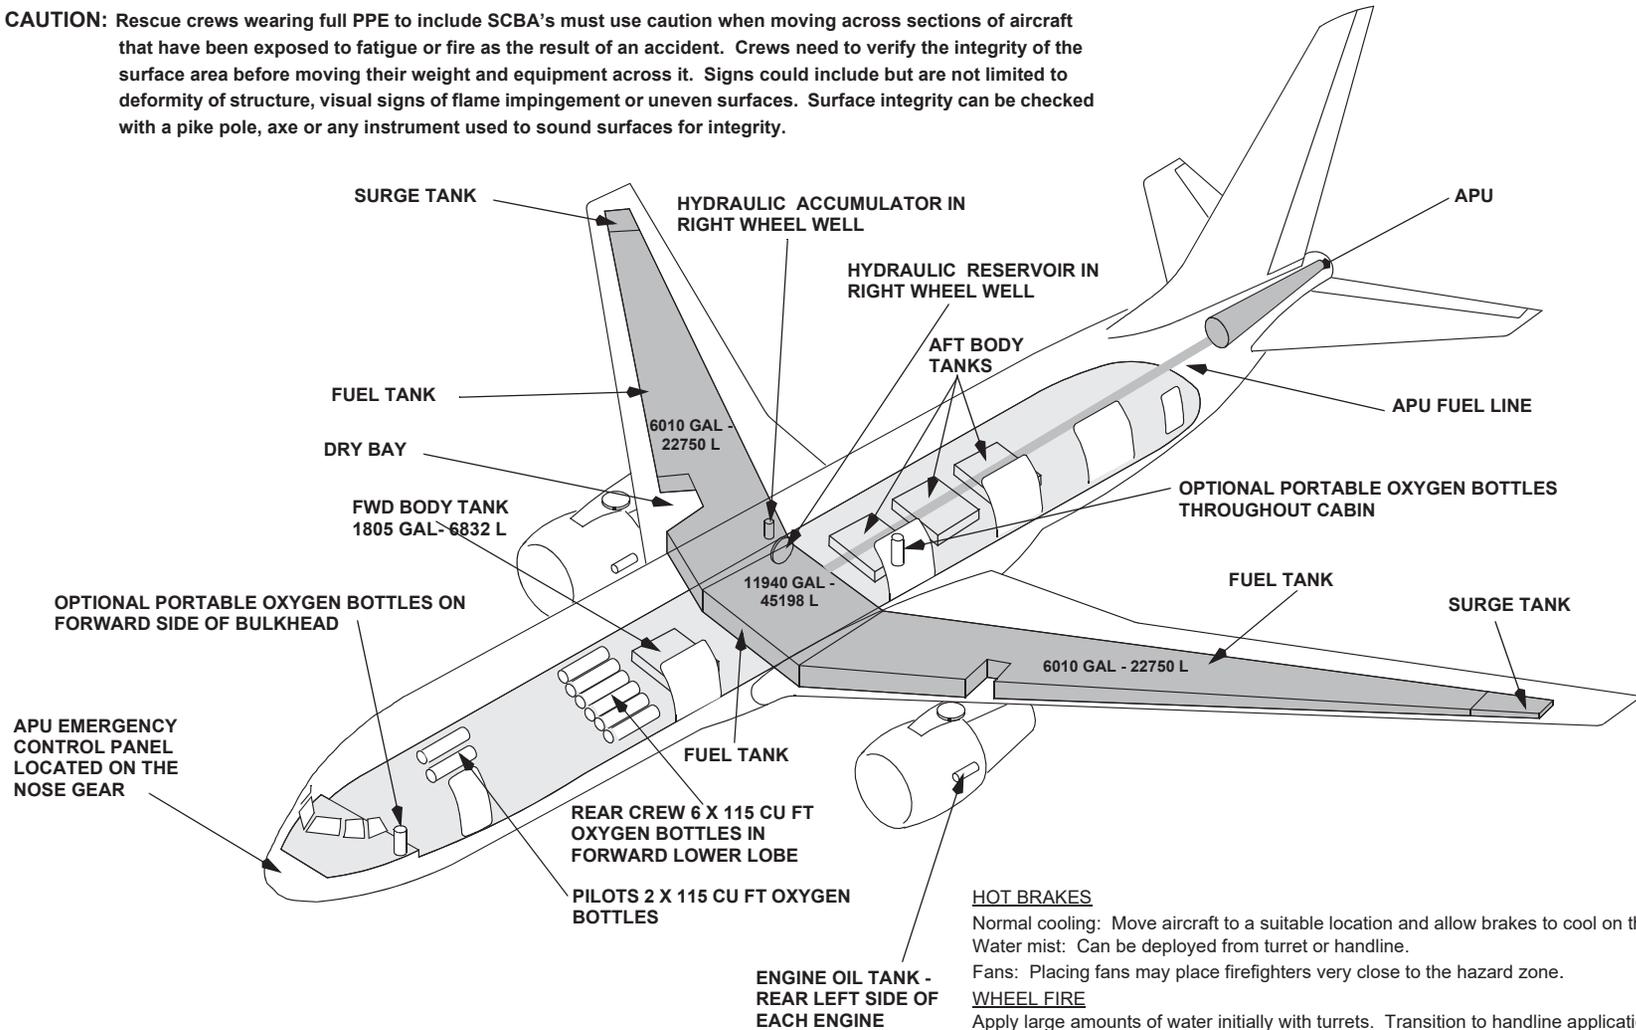

HOT BRAKES

Normal cooling: Move aircraft to a suitable location and allow brakes to cool on their own.
Water mist: Can be deployed from turret or handline.

Fans: Placing fans may place firefighters very close to the hazard zone.

WHEEL FIRE

Apply large amounts of water initially with turrets. Transition to handline application to continue and maintain a cooling effect.


Wheels are equipped with fusible plugs designed to melt and deflate the tire when the temperature is excessive.

WARNING: Approach landing gear trucks from forward or aft at a 45 degree angle when approaching hot brakes or fighting a wheel fire, as rims and tires may pose a fragmentation hazard.

767 -2C Freighter

EMERGENCY RESCUE ACCESS-1


1 ENTRY/SERVICE DOOR EXTERNAL HANDLE

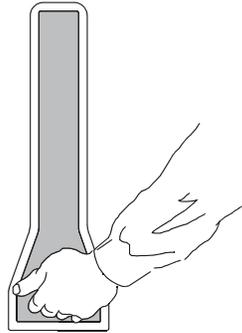

TO OPEN DOOR:

1. PUSH IN DISARM LEVER (RED SURFACE LABELED "PUSH").
2. PULL AND LIFT OPERATING HANDLE TO UNLATCH DOOR.
3. MOVE DOOR UPWARD.

2 OVERWING ESCAPE HATCHES

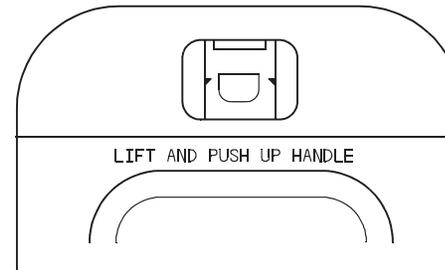

TO OPEN HATCH:

1. LIFT LOWER PORTION OF HANDLE AWAY FROM THE SIDE OF THE AIRPLANE.
2. PUSH INWARD AND UP ON THE HANDLE.
3. PUSH HATCH INWARD.

4 CUT-IN AREAS

NOTE: CUT-IN AREAS REQUIRE METAL CUTTING PORTABLE POWER EQUIPMENT. BECAUSE OF TYPE OF STRUCTURE AND POSSIBLE INJURY TO PERSONNEL WITHIN, IT IS RECOMMENDED THAT MAJOR EFFORT TO GAIN ACCESS BE DIRECTED TO HATCHES AND DOORS. URGENCY OF SITUATION WILL DICTATE THE NECESSITY FOR A CUT-IN.


NOTES:

1. FOR ENTRY/SERVICE DOORS AND OVERWING HATCHES, ESCAPE SLIDE DISARMS AUTOMATICALLY WHEN DOOR OR HATCH IS OPENED FROM THE OUTSIDE.
2. ON PASSENGER AIRPLANES, COCKPIT WINDOWS CANNOT BE OPENED FROM THE OUTSIDE.
3. ON 767 FREIGHTERS, THE RIGHT SIDE COCKPIT WINDOW CAN BE OPENED FROM THE OUTSIDE.

767 -2C Freighter


EMERGENCY RESCUE ACCESS-2

■ 2" WIDE BAND OF CONTRASTING COLOR INDICATING ALL PASSENGER DOORS, HATCHES AND WINDOWS EXTERNALLY OPERABLE.

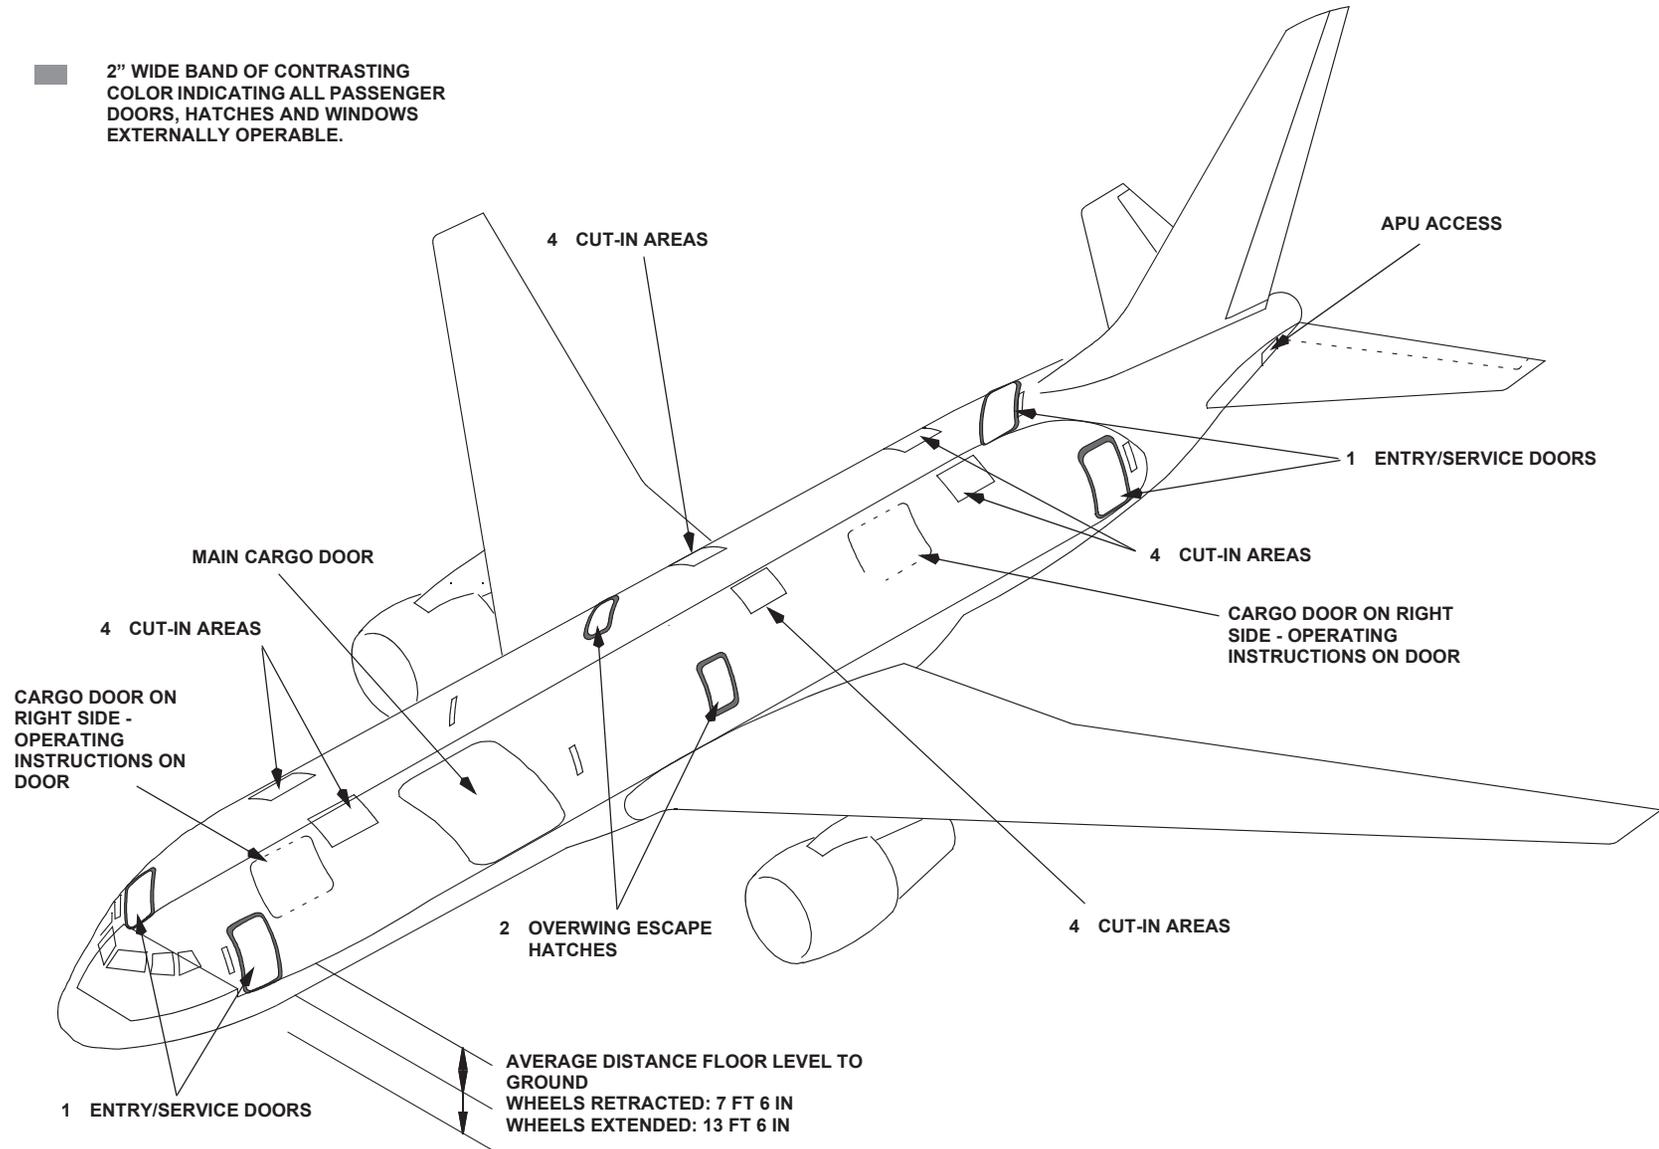


767 -2C Freighter

BATTERY LOCATIONS

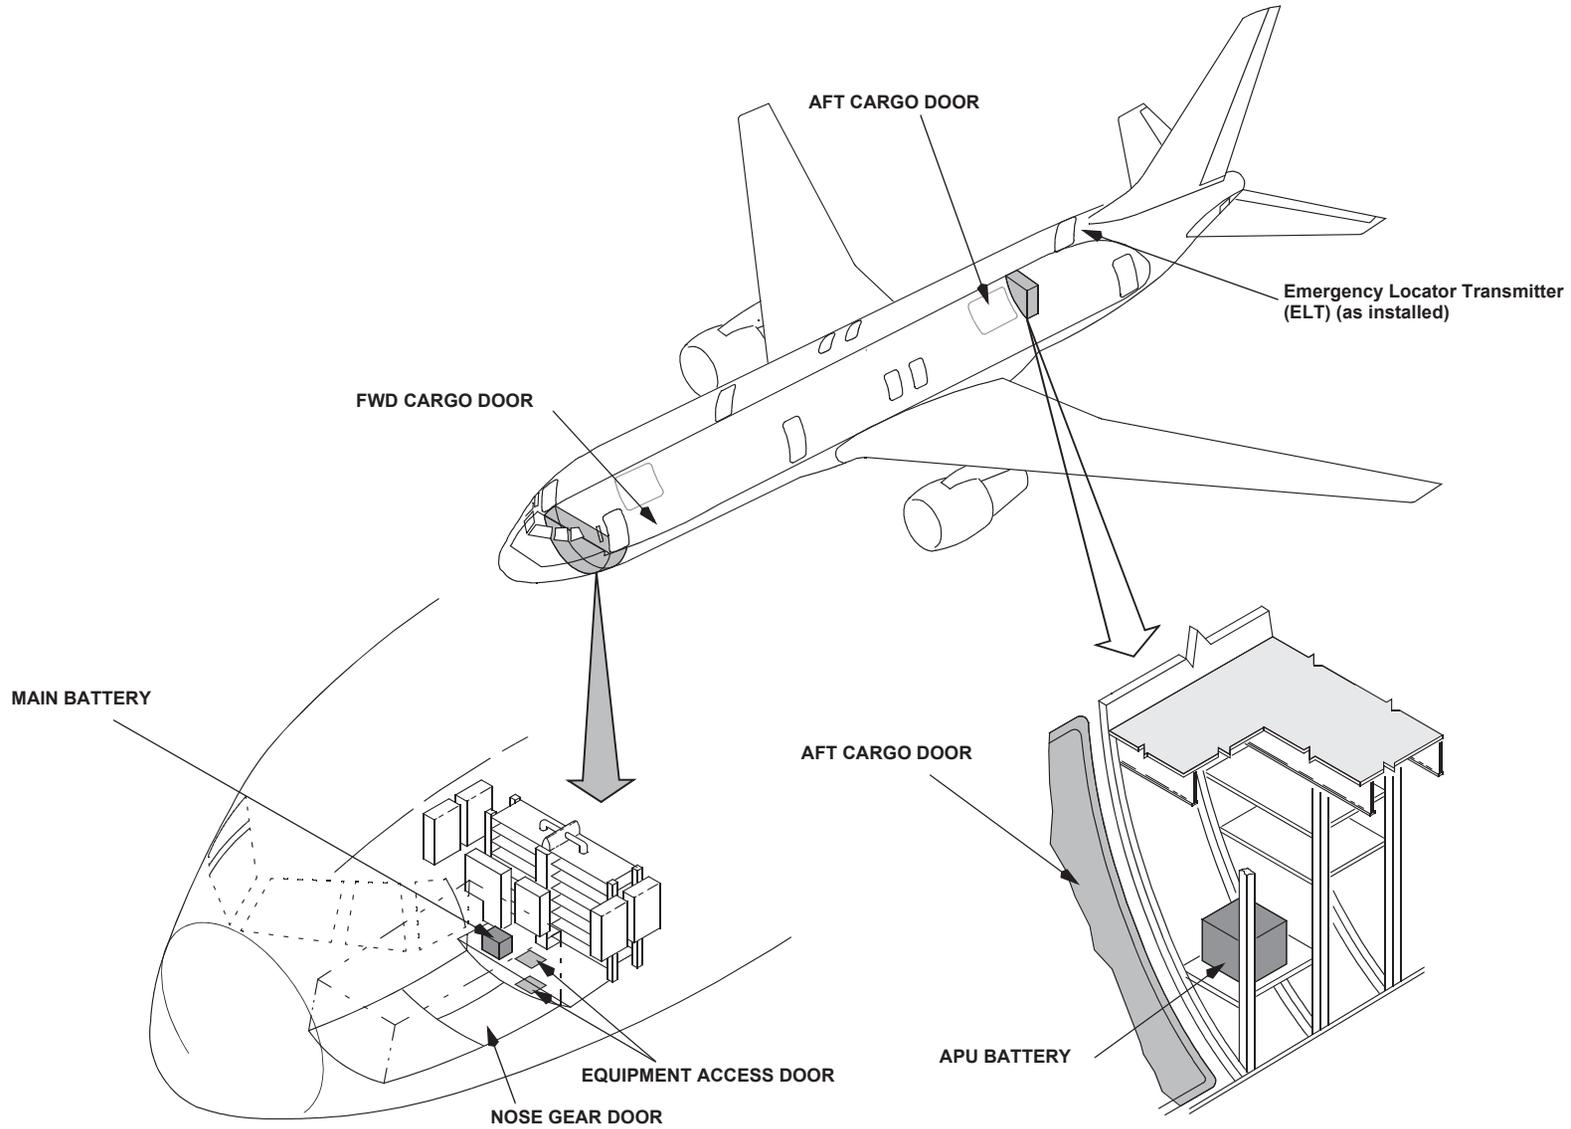


767 -2C Freighter

FLIGHT DECK CONTROL SWITCH LOCATIONS

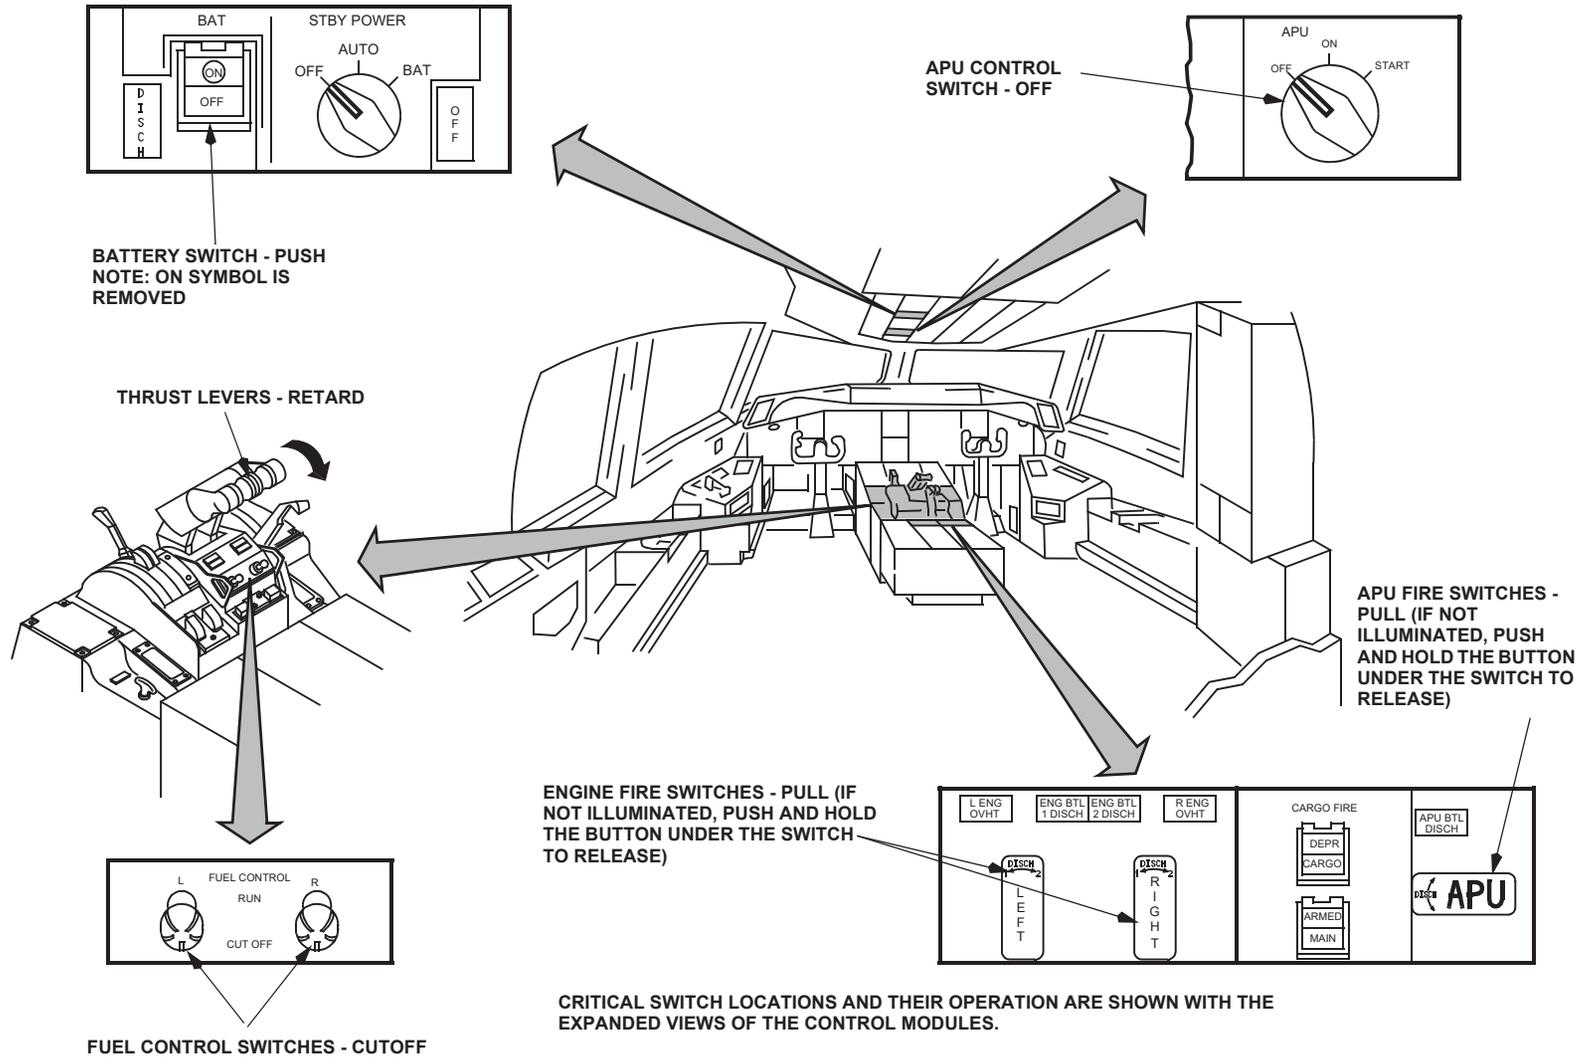

767 -2C Freighter

COMPOSITE MATERIALS LOCATIONS

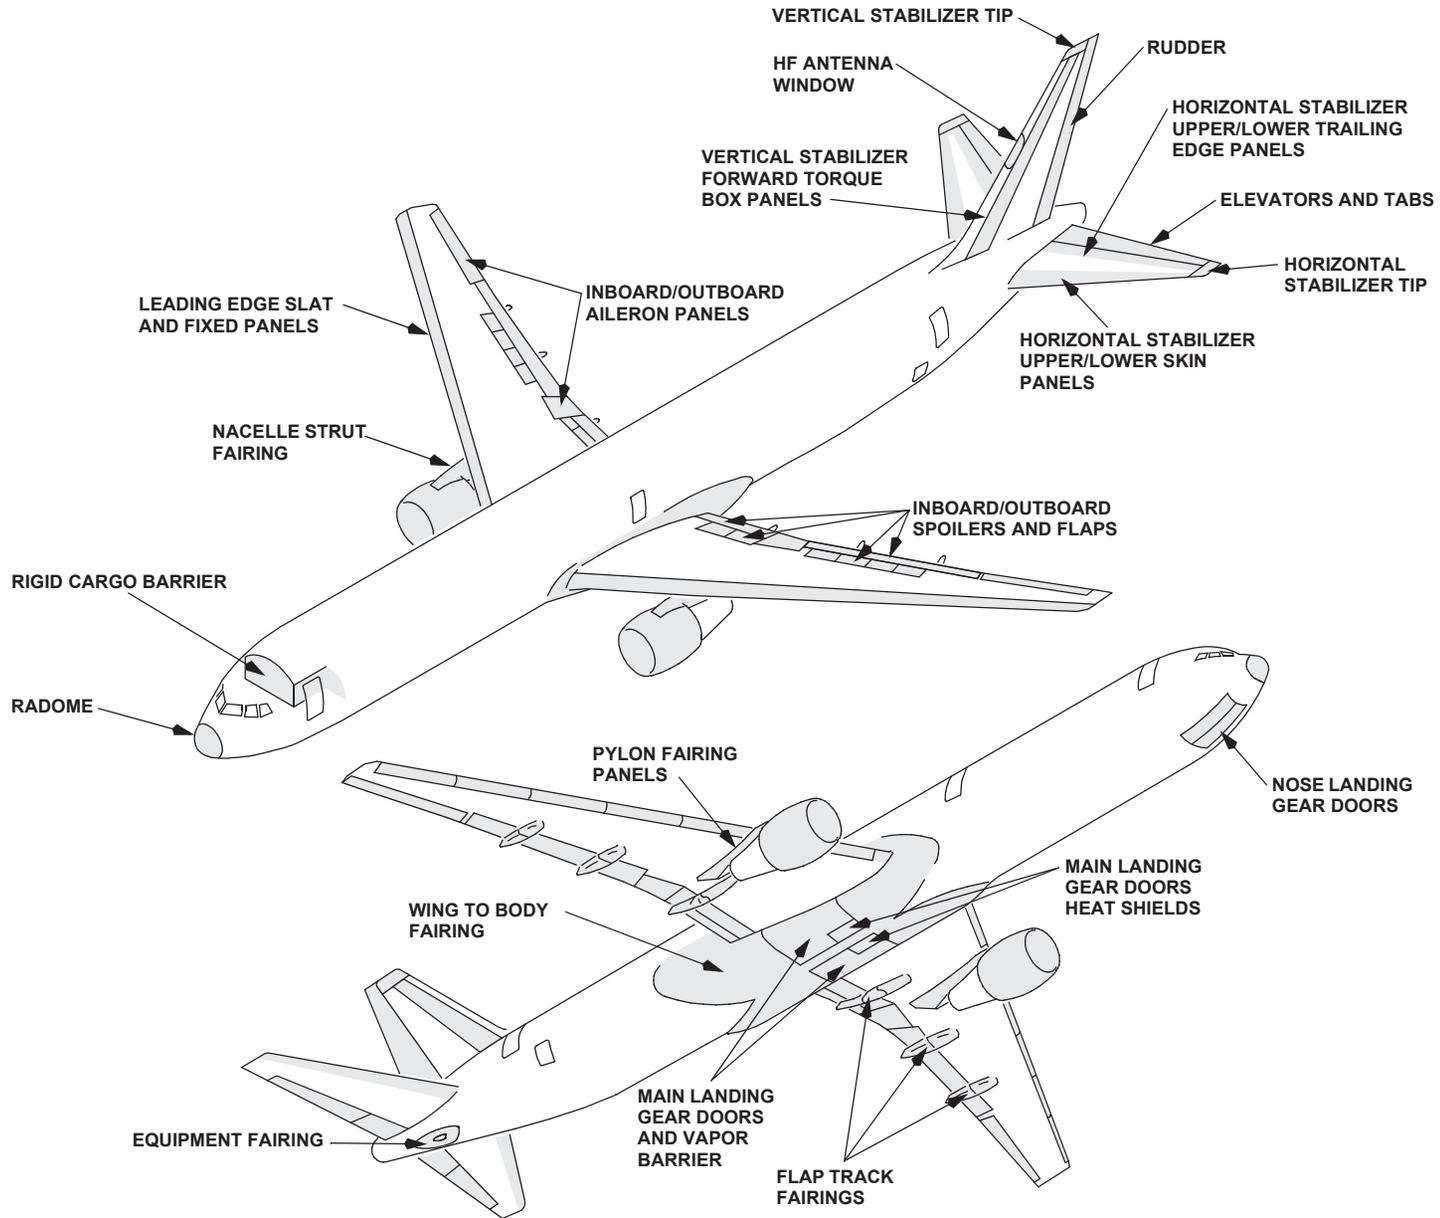

Copyright © Boeing. See title page for details.