

# DC-6 SERIES

# FLAMMABLE MATERIAL LOCATIONS


**HOT BRAKES**

Normal cooling: Move aircraft to a suitable location and allow brakes to cool on their own.  
 Water mist: Can be deployed from turret or handline.  
 Fans: Placing fans may place firefighters very close to the hazard zone.

**WHEEL FIRE**

Apply large amounts of water initially with turrets. Transition to handline application to continue and maintain a cooling effect.  
**Wheels are equipped with fusible plugs designed to melt and deflate the tire when the temperature is excessive.**

**WARNING:** Approach landing gear trucks from forward or aft when fighting a wheel fire, as wheels and tires may explode.

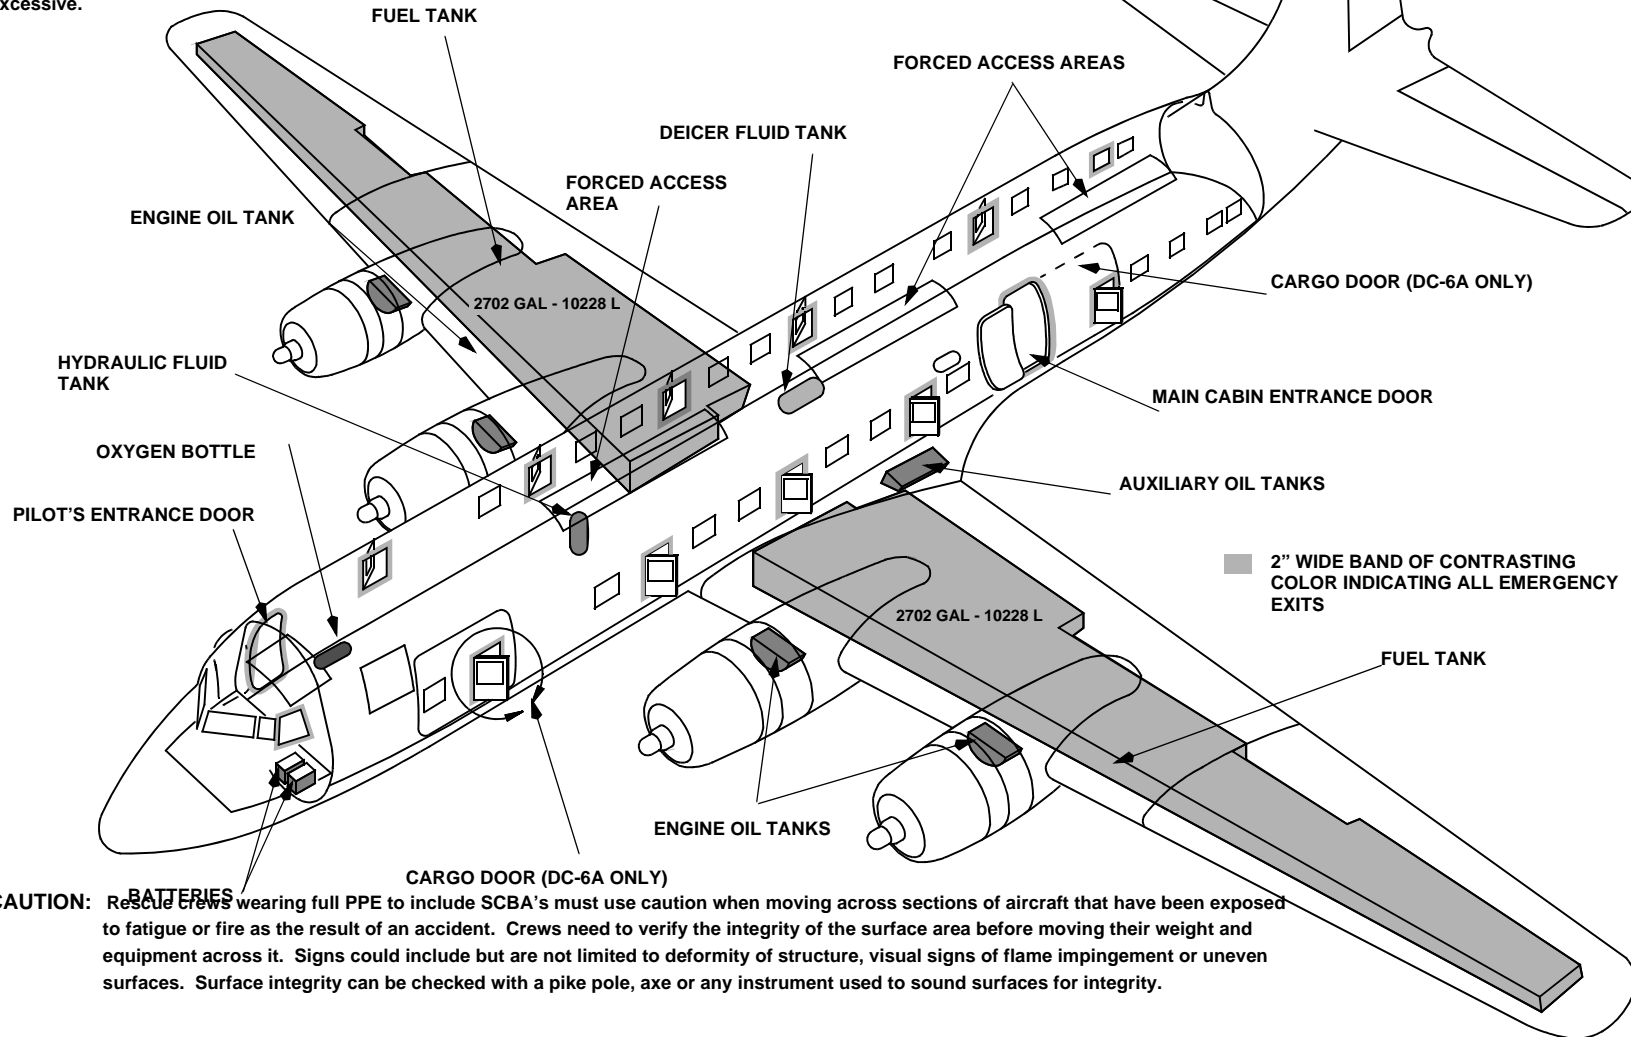

**CAUTION:** Rescue crews wearing full PPE to include SCBA's must use caution when moving across sections of aircraft that have been exposed to fatigue or fire as the result of an accident. Crews need to verify the integrity of the surface area before moving their weight and equipment across it. Signs could include but are not limited to deformity of structure, visual signs of flame impingement or uneven surfaces. Surface integrity can be checked with a pike pole, axe or any instrument used to sound surfaces for integrity.

**DC-6 SERIES**

**Intentionally Blank**