


### DC-7 SERIES

## **FLAMMABLE MATERIAL LOCATIONS**

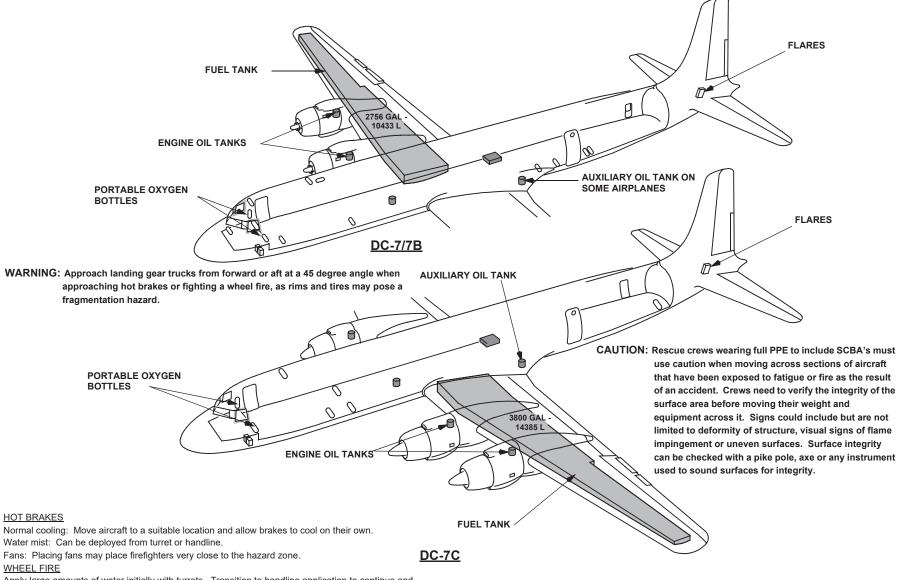

Apply large amounts of water initially with turrets. Transition to handline application to continue and maintain a cooling effect.

Wheels are equipped with fusible plugs designed to melt and deflate the tire when the temperature is excessive.


April 30, 2024 DC-7.0.1



### **DC-7 SERIES**

### **EMERGENCY RESCUE ACCESS**


# 1 CREW AND MAIN CABIN DOORS EXTERNAL HANDLE



#### TO OPEN DOOR:

- 1. ROTATE HANDLE COUNTERCLOCKWISE.
- 2. PULL DOOR OUTWARD.


# 2 EMERGENCY EXIT DOORS EXTERNAL HANDLE



#### TO OPEN DOOR:

- 1. PULL HANDLE OUT.
- 2. PUSH DOOR INWARD.


### 3 ESCAPE HATCH EXTERNAL HANDLE

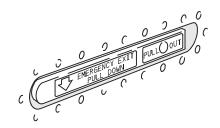

#### TO OPEN HATCH:

- 1. PULL HANDLE OUT.
- 2. ROTATE HANDLE COUNTERCLOCKWISE.
- 3. PULL HATCH OUT.

### **4 CUT-IN AREAS**

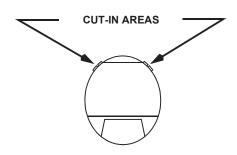

NOTE: CUT-IN AREAS REQUIRE METAL CUTTING PORTABLE POWER

EQUIPMENT. BECAUSE OF TYPE OF STRUCTURE AND POSSIBLE INJURY TO PERSONNEL WITHIN, IT IS

RECOMMENDED THAT MAJOR EFFORT TO GAIN ACCESS BE


DIRECTED TO HATCHES AND DOORS. URGENCY OF SITUATION

WILL DICTATE THE NECESSITY FOR A CUT-IN.




## **DC-7 SERIES**

## **EMERGENCY RESCUE ACCESS**

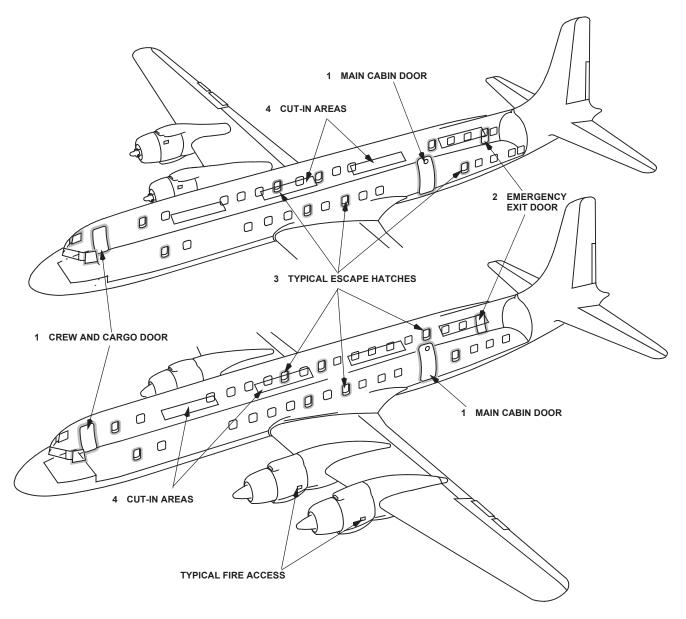



## **BATTERY LOCATIONS**

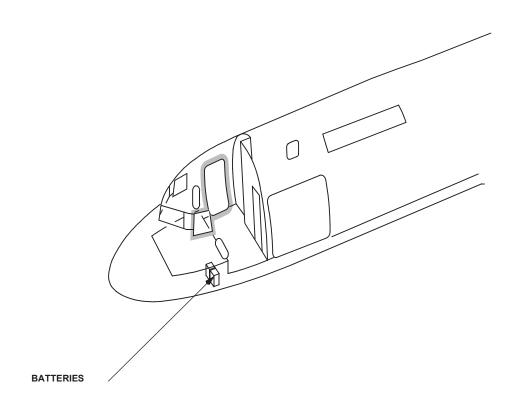




### DC-7 FREIGHTER SERIES

## FLAMMABLE MATERIAL LOCATIONS

WARNING: Approach landing gear trucks from forward or aft at a 45 degree angle when approaching hot brakes or fighting a wheel fire, as rims and tires may pose a fragmentation hazard.

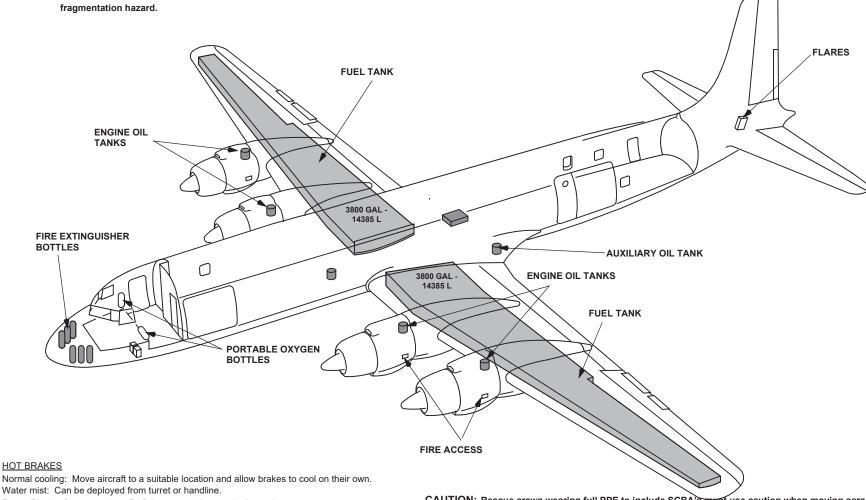

#### **HOT BRAKES**

Fans: Placing fans may place firefighters very close to the hazard zone.

Apply large amounts of water initially with turrets. Transition to handline application to continue and maintain a cooling effect.

Wheels are equipped with fusible plugs designed to melt and deflate the tire when the temperature is excessive.

CAUTION: Rescue crews wearing full PPE to include SCBA's must use caution when moving across sections of aircraft that have been exposed to fatigue or fire as the result of an accident. Crews need to verify the integrity of the surface area before moving their weight and equipment across it. Signs could include but are not limited to deformity of structure, visual signs of flame impingement or uneven surfaces. Surface integrity can be checked with a pike pole, axe or any instrument used to sound surfaces for integrity.


DC-7.1.1 April 30, 2024



### **DC-7 FREIGHTER SERIES**

### **EMERGENCY RESCUE ACCESS-1**


# 1 CREW AND MAIN CABIN DOORS EXTERNAL HANDLE



#### TO OPEN DOOR:

- 1. ROTATE HANDLE COUNTERCLOCKWISE.
- 2. PULL DOOR OUTWARD.


# 2 EMERGENCY EXIT DOORS EXTERNAL HANDLE



#### TO OPEN DOOR:

- 1. PULL HANDLE OUT.
- 2. PUSH DOOR INWARD.


#### 3 ESCAPE HATCH EXTERNAL HANDLE

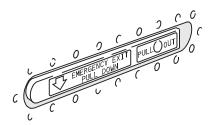

#### TO OPEN HATCH:

- 1. PULL HANDLE OUT.
- 2. ROTATE HANDLE COUNTERCLOCKWISE.
- 3. PULL HATCH OUT.

### **4 CUT-IN AREAS**

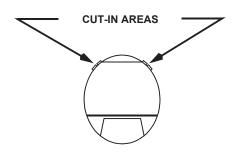

NOTE: CUT-IN AREAS REQUIRE METAL CUTTING PORTABLE POWER EQUIPMENT. BECAUSE OF TYPE OF STRUCTURE AND


POSSIBLE INJURY TO PERSONNEL WITHIN, IT IS RECOMMENDED THAT MAJOR EFFORT TO GAIN ACCESS BE DIRECTED TO HATCHES AND DOORS. URGENCY OF SITUATION

WILL DICTATE THE NECESSITY FOR A CUT-IN.



## **DC-7 FREIGHTER SERIES**

## **EMERGENCY RESCUE ACCESS-2**

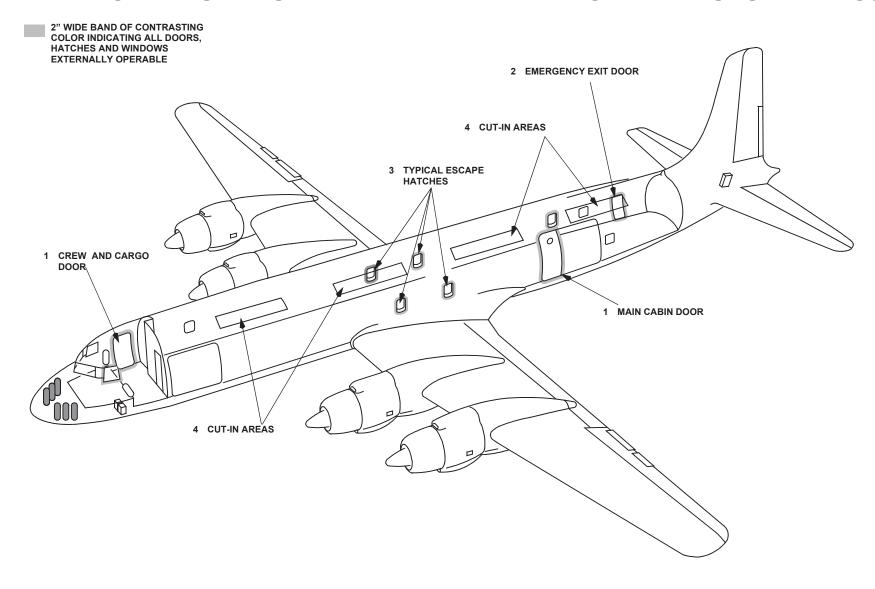



**Intentionally Blank**